


# US&WS&DS102-N IP Phone Quick Operator Guide

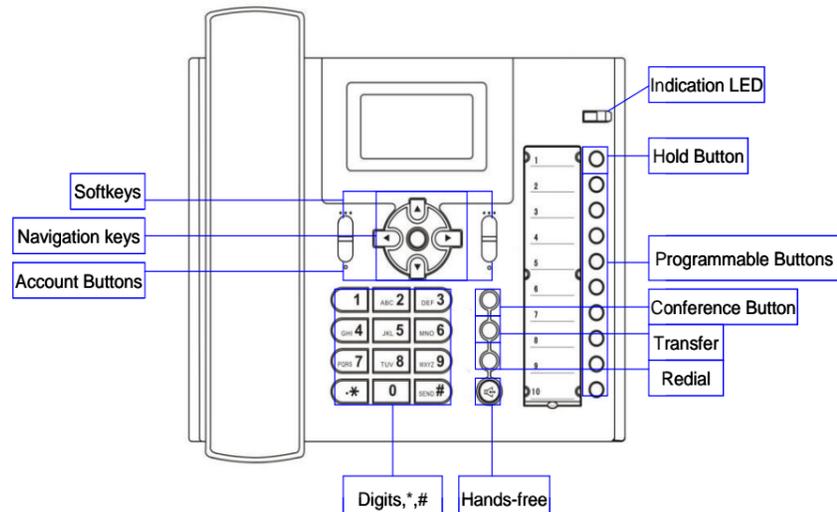

## LEDs


Table 1 Line Buttons

LED Status	Description
Red, flashing	There is an incoming call.
Red, steady	Pick up and enter normal call.

Table 2 Light-strip


LED Status	Description
Red, flashing	There is an incoming call.
Red, steady	Missed Calls, or phone busy.

## Mounting bracket, telephone access

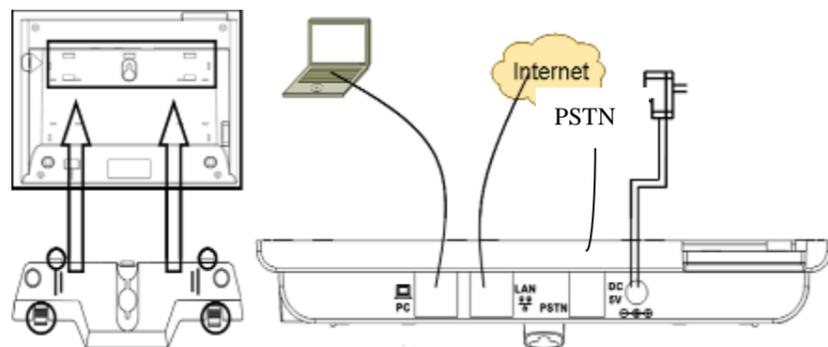

2-1

## Connection handle

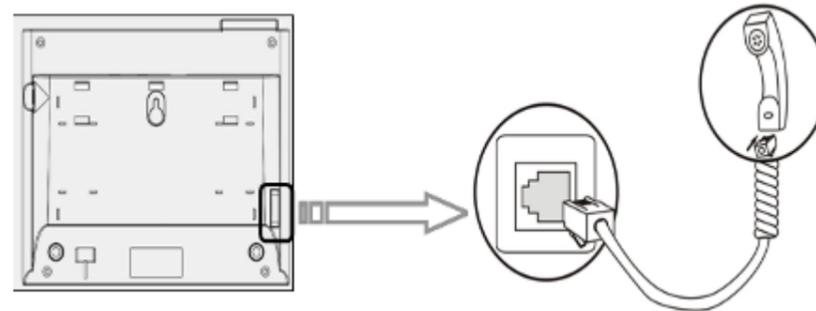

## Placing a Call

You can pick up the handset or press **Headset/Speaker** button to place a call.

- **Dial directly:** Dial number directly, then press # button or **Send** soft-key;
- **PSTN Call(DS102):** Press the line button of PSTN, and then dial number (hook off your handset and dial directly when it is power down);
- **Redial:** Press **Redial** button/soft-key to dial the latest number;
- **Dial from Call history:** Press **Menu** button, select "Call history" and select "Missed calls" (**Navigation button-Down** in standby status), "Received calls" (**Navigation button-Left**) and "Dial number" (**Navigation button-Right**) list to dial a number by pressing **Dial** soft-key.

## Answering a Call

- **Answer directly:** You can answer a call by lifting the handset, or pressing the **Headset/Speaker** button;
- **Auto Answer:** Press **Menu** button>"Function Setting">"Auto answer" >"Enable", then your phone will answer incoming calls automatically.

## Transferring Calls

- Press **Transfer** button/soft-key in a calling, dial a target number, then you should talk to the transfer recipient, hook on to complete transferring.

2-2

## Hold&Resume

- If you want to hold an active call, you can press **Hold** button/softkey, and resume it by pressing again.
- You can switch to other lines and hold the active call by pressing **line** button of other lines, and resume it by pressing the **line** button of previous line.

## Volume Adjustment

You can adjust the volume in different status with volume button.

Phone Status	Corresponding volume
Standby	Ring volume
Hook off	Handset volume
Hand-free	Speakerphone volume
Headset enable	Headset volume

You can adjust the corresponding microphone input volume as follow:

- Press **Menu** button >"System setting">"Phone setting">"Volume setting".

## 3-way Conference

You can invite the third party into a conference in an active call:

- Press **Conference** button in an active call, dial the third party number, and press **Conference** button again when you have connected the third party.
- When the number of conference member is greater than 3, you can make more phones to join the conference and it will become a multiparty conference.

\*For details, you can refer to the corresponding User Manual.

WEB Login User Name: root Password: root



Address: Floor 4 Building C YueAn Industrial Park No.51Huangcun Road Tianhe District Guangzhou China

Postal Code: 510665

Tel: 86-20-28096798

Fax: 86-20-28096786

E-mail: support@escene.cn

http://www.escene.hk/en