Gigaset

SL610H PRO





Gigaset SL610H PRO – your high-quality accessory

This phone sets new standards with its high-quality genuine metal keypad, 1.8 " TFT colour display and incorporated functions. Your Gigaset can do a lot more than just make calls:

Bluetooth® and mini USB

Connect your handset to a PC or headset using a mini USB (→ page 12) or Bluetooth® (→ page 26).

Directory for up to 500 vCards – calendar and appointments

Save phone numbers and other data to the directory (\rightarrow page 17). Enter appointments and birthdays in the calendar and set reminders (\rightarrow page 23).

Large font

Increase readability of call lists and the directory (→ page 29).

Customise

Assign personal caller display pictures (\rightarrow page 18), view your personal pictures as a screen-saver slide show (\rightarrow page 29) or change the colour scheme of the display (\rightarrow page 29). Choose from a selection of ringtones specially composed for your SL610H PRO or load your own (\rightarrow page 30).

If you don't (always) want it to ring

Make the most of the silent alert (\rightarrow page 31), the time control for calls (\rightarrow page 30) or ensure that all calls with a withheld number are not signalled (\rightarrow page 31).

Other practical information

Synchronise the directory of an existing Gigaset handset (→ page 19), use the quick dial function (→ page 19), adapt your Gigaset to suit your handsfree requirements (→ page 30) and adjust the brightness of your keypad to suit you (→ page 29).

Environment

Gigaset Green Home — Be environmentally aware when using your phone. Details about our ECO DECT products can be found at www.gigaset.com/customercare.

Further information on your phone can be found at www.gigaset.com/pro/gigasetSL610HPRO.

After purchasing your Gigaset phone, please register it at www.gigaset.com/customercare – this will ensure any questions you may have or warranty services you request are dealt with even faster!

Have fun using your new phone!

Brief overview



- 1 Display in idle status
- 2 Battery charge status (→ page 11)
- 3 Display keys (→ page 4)
- 4 Message key (→ page 21) Access to call and message lists; Flashes: new message or new call

5 End call key, On/Off key

End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)

6 Hash key

Keypad lock on/off (press and hold in idle status);

toggles between upper/lower case and digits

- 7 Mute key (→ page 17) Mute the microphone
- 8 Mini USB port (→ page 12)
- 9 Microphone
- 10 Recall key
 - Recall
 - Insert a dialling pause (press and hold)

11 Star key

Ringtone on/off (press and hold); with an open connection: switch between pulse dialling/tone dialling (press briefly); text input: open table of special characters

- 12 Headset socket (→ page 12)
- 13 Key 1

Dial (network) mailbox (press and hold)

14 Talk key

Flashes: incoming call;

Accept a call; open redial list (press briefly); start dialling (press and hold)

15 Handsfree key (→ page 16)

Switch between earpiece and handsfree mode;

Accept a call; open redial list (press briefly); start dialling (press and hold)

- 16 **Control key** (→ page 12)
- 17 Signal strength (→ page 11)
 Green: Eco Mode (→ page 23) activated


Please note


To change the **display language**, proceed as follows (→ page 28):

- Press keys **slowly** one after the other.
 - Select the correct language and press the right display key.

Display symbols

The following symbols are displayed dependent on the settings and the operating status of your telephone:

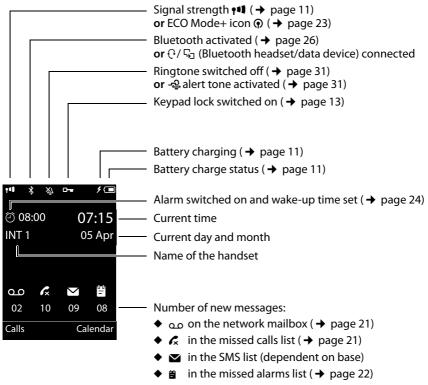

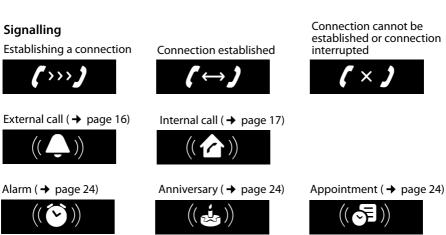

Other display symbols





Action complete



Switch from earpiece to handsfree mode (→ page 16)



Query



Action failed



Switch from handsfree to earpiece mode (→ page 16)



Please wait...



Room monitor activated (→ page 25)

 


Snooze mode (→ page 25)



Display keys

The functions of the display keys change depending on the particular operating situation. Example:



- ① Current display key function
- ② Display keys

Important display keys:

Calls Calendar

Open call lists.

Open calendar.

Options

Open a menu for further functions.

Confirm selection.

< C

Delete key: delete character by character/word by word from riaht to left.

Back

Go back one menu level or cancel operation.

Save

Save entry.

Main menu symbols



Select Services

Bluetooth

Additional Features

[÷

Call Lists

SMS (dependent on base)

Voice Mail

S S

Organizer Directory

Settings

Information on using the menus (→ page 13)

Menu overview (→ page 14)

Contents

Gigaset SL610H PRO – your high-quality accessory	1
Brief overview	2
Display symbols	3
Display keys	4
Main menu symbols	4
Safety precautions	7
First steps Installing the charger Connecting the charger Setting up the handset for use Registering the handset Establishing the mini USB connection	8
Using the phone Using the control key Using the menus Activating/deactivating the handset Activating/deactivating keypad lock	12 13 13
Menu overview	14
Making calls Making an external call One Touch Call Ending a call Accepting a call Using handsfree mode Switching to mute Making internal calls	16 16 16 16 17
Using the directory and lists Directory Redial list Call lists Message key function Missed alarms list	20
Using the network mailbox	22
ECO DECT	22
ECO DECT	23
Setting an appointment (calendar) Displaying missed appointments, anniversaries	23

Contents

Using a handset as a room monitor (Babyphone)	25
Using Bluetooth devices	26
Defining handset settings	28
Quick dialling numbers and functions	
Changing the display language	28
Setting the display	
Setting keypad illumination	
Activating/deactivating auto answer	
Changing the handsfree/earpiece volume	
Setting a handsfree profile	
Changing ringtones	
Using the Resource Directory	
Activating/deactivating advisory tones	
Restoring the handset default settings	
Service (Customer Care)	33
Questions and answers	
Authorisation	
Protecting our environment	34
Appendix	35
Caring for your telephone	
Contact with liquid	
Specifications	
Writing and editing text	
Accessing additional functions via the PC interface	37
Accessories	38
I. J	20

Safety precautions

Warning

Be sure to read this user guide and the safety precautions before using your telephone. Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied, as indicated on the underside of the base.



Use only **rechargeable batteries** that correspond to the **specification provided on page 35**, as this could otherwise result in significant health risks and personal injury.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy. Please refer to the "Appendix" chapter for the specifications of this Gigaset product.



Do not hold the rear of the handset to your ear when it is ringing or when handsfree mode is activated. Otherwise you risk serious and permanent damage to your hearing.

Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.

The handset may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Do not install the base or charger in bathrooms or shower rooms. The base and charger are not splashproof (\rightarrow page 35).



Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).



If you give your Gigaset to a third party, make sure you also give them the user guide.



Remove faulty bases from use or have them repaired by our Service, as they could interfere with other wireless services.

Please note

- ◆ Not all of the functions described in this user guide are available in all countries.
- The device cannot be used in the event of a power failure. It is also not possible to transmit emergency calls.

First steps

Checking the package contents: One Gigaset handset, one battery, one battery cover, one charger, one power adapter for the charger, one belt clip, one user guide.

Installing the charger

The charger is designed for use in dry rooms in a temperature range of $+5^{\circ}$ C to $+45^{\circ}$ C.

▶ Install the charger on a level, non-slip surface.

Please note

Pay attention to the range of the base.


This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when **Eco Mode** (→ page 23) is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:

- Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

Connecting the charger

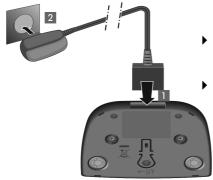

- Connect the flat plug from the power adapter 1.
 - Plug the power adapter into the plug socket 2.

To disconnect the plug from the charger, press the release button 3 and disconnect the plug 4.



Setting up the handset for use


The display is protected by a plastic film. Please remove the protective film!


Inserting the battery and closing the battery cover

Please note

Use only rechargeable batteries recommended by Gigaset Communications GmbH, as this could result in significant health risks and personal injury. For example, the outer casing of the battery could be destroyed or the battery could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ► First insert battery with the contact surface facing down (a).
- ▶ Then press the battery downwards ⓑ until it clicks into place.

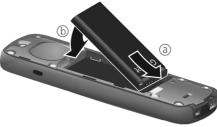

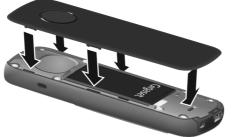

- First, align the protrusions on the side of the battery cover with the notches on the inside of the casing.
- Then press the cover until it clicks into place.

To **reopen the battery cover** to replace the battery:

- Remove the belt clip (if attached).
- Insert your fingernail into the notch at the bottom of the casing and pull the battery cover upwards.


To **change the battery**, insert your fingernail into the notch in the casing and pull the battery upwards.



Initial charging and discharging of the battery

The correct charge status can only be displayed once the battery is first fully charged **and** discharged.

▶ Charge the handset in the charger for **3 hours**.

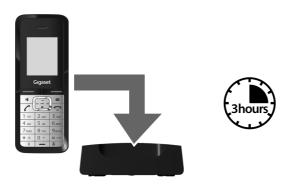

Please note

Only place the handset in the designated charger.

 After charging, remove the handset from the charger and only replace it when the battery is fully discharged.

Please note

- After the initial battery charge and discharge, you may place your handset in the base after every call.
- Always repeat the charging and discharging procedure if you remove the battery from the handset and reinsert them.
- ◆ The battery may warm up during charging. This is not dangerous.
- After a while, the charge capacity of the battery will decrease for technical reasons.

Registering the handset

Your Gigaset handset can be registered on up to four bases. You must register the handset on both the handset (1) and the base (2).

Once the registration process has been completed successfully, the handset returns to idle status. The handset's internal number is shown in the display, e.g., **INT 1**. If not, repeat the procedure.

1) On the handset

 


Press the key below Register on the display screen.

A message appears stating that the handset is searching for a base that is ready for registration.

Please note

If the handset is already registered **to at least one base**, start the registration process as follows:



If the handset is already registered to **four** bases, select the required base.

2) On the base

Within 60 sec. press and **hold** the registration/paging key on the base (approx. 3 sec.).

Please note

For instructions on deregistering the handsets, please consult the base user guide.

Display in idle status

Once the phone is registered and the time set, the idle status is shown as in this example.

Displays

- Reception between the base and the handset:
 - Good to poor: †■1 †■ †
 - No reception:

Green: Eco Mode (→ page 23)

- Battery charge status:
 - white: charged over 66%
 - white: charged between 33% and 66%
 - white: charged between 10% and 33%
 - red: charged below 10%
 - **[am]** flashes red: battery almost empty (less than 10-minutes talktime)
 - **f f f f m f m** white: battery charging
- ◆ INT 1

Internal name of the handset



If **Eco Mode**+ (→ page 23) is activated, the **(** icon is displayed in the top left corner of the display.

Your phone is now ready for use!

Establishing the mini USB connection

The mini USB connection is on the underside of your Gigaset handset.



Connecting the headset



You can connect a headset to the left-hand side of your telephone with the 2.5 mm jack connector (available from Service).

See the relevant product page at www.gigaset.com for information on recommended headsets.

The headset volume corresponds to the settings for the earpiece volume.

Connecting the USB data cable

You can connect a standard USB data cable with a USB mini-B connector to synchronise your handset with a PC. To use this function, the **Gigaset QuickSync** software must be installed (→ page 37).

Using the phone

Using the control key

Below, the side of the control key that you must press in the respective operating situation is marked in black (top, bottom, right, left, centre), e.g., for "press right on the control key" or for "press the centre of the control key".



Functions when pressing the middle of the control key

Depending on the operating situation, the key has different functions.

- ◆ In idle status the key opens the main menu.
- In submenus, selection and input fields, the key takes on the function of the display keys OK, Yes, Save, Select or Change.

Using the menus

The menu view can be expanded (**expert mode** (**expert mode**) or simplified. Expert mode is the active default setting.

Main menu (first menu level)

- ▶ When the handset is in idle status, press the **right** control key to open the main menu.
- ▶ Use the control key 🔂 to select the required function and press the display key OK.

Submenus

The functions in the submenus are displayed as lists.

▶ Scroll to the function with the control key 🖨 and press OK.

Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

▶ Press and **hold** the end call key **.**.

or:

▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display keys OK, Yes or Save are lost.

Activating/deactivating the handset

©

With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.

Press and **hold** the end call key again to switch the handset on.

Activating/deactivating keypad lock

Keypad lock prevents any inadvertent use of the phone.

⊷

Press and **hold** the hash key in idle status to activate or deactivate keypad lock. You will hear the confirmation tone.

If keypad lock is activated, you will see a message when you press a key.

Keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

Please note

When keypad lock is active, you cannot even call emergency numbers.

Menu overview

Setting simplified or expert mode

The menu view can be expanded (**expert mode** (E)) or simplified. Expert mode is the active default setting. Menu options that are only available in expert mode are marked with the (E) icon.

To change these settings:

Select → ★ → Menu View → Simplified or Complete (expert mode)

→ Select (the active mode is marked with **③**)

Open the main menu: press when the phone is in idle mode.


Select Services

(Menu dependent on base)

Bluetooth

Activation	→ page 26
Search for Headset	→ page 26
Search Data Device	→ page 26
Known Devices	→ page 27
Own Device	→ page 27

Additional Features

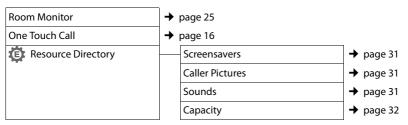

Call Lists

All Calls	→	page 20
Outgoing Calls	→	page 20
Accepted Calls	→	page 20
Missed Calls	→	page 20

✓ SMS


(Menu dependent on base)

Voice Mail

(Menu dependent on base)

Organizer

Calendar	→	page 23
Alarm Clock	→	page 24
Missed Alarms	→	page 24

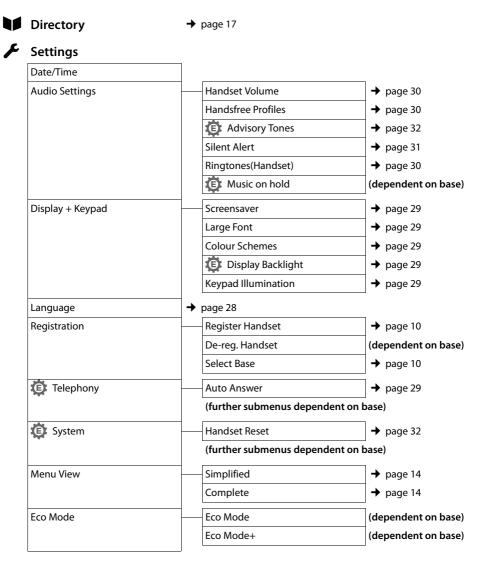

Making calls

Making an external call

External calls are calls using the public telephone network.



Enter the number and press the talk key.

or:

 


Press and **hold** the talk key and then enter the number.

You can cancel the dialling operation with the end call key .

One Touch Call

You can set up your phone that by pressing **any** key a previously stored number is dialled. This allows for example children, who can not enter a number, to call a certain number.



▶ Change multiple line input:

Activation:

Select **On** to activate.

Call to:

Enter or change number.

Press Save to save the settings.

When the function is activated, the idle display looks as shown below:



By pressing any key the saved number is dialled. Press the end call key , to cancel the dialling operation or to end the call.

Deactivating the One Touch Call

- ▶ In idle status, press the display key OFF.
- ▶ Press and **hold** the hash key (# →), to deactivate the One Touch Call.

Ending a call



Press the end call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing/silent alert, by a display on the screen and by the flashing talk key .

Accept the call by:

- ▶ Pressing the talk key <a>C.
- ▶ Pressing the handsfree key <a>
 ■.
- Pressing the display key Accept.

If the handset is in the charger and the **Auto Answer** function is activated (→ page 29), the handset will automatically accept a call when you lift it out of the cradle.

To deactivate the ringtone/silent alert, press the Silence display key. You can accept the call as long as it is displayed on the screen.

Using handsfree mode

You can set various handsfree profiles to optimally adapt your phone to your environment.

Activating/deactivating handsfree mode

Activating while dialling



Enter the number and press the handsfree key.

Switching between earpiece and handsfree mode

Press the handsfree key.

If you wish to place the handset in the charger during a call:

Press and hold handsfree key while placing the handset in the base/charger and for a further 2 seconds.

For instructions on adjusting the handsfree volume (→ page 30).

Switching to mute

You can deactivate your handset's microphone during a call.



Press key to mute the handset.

The display shows Microphone

is off.

 
Press the key again to reactivate the microphone.

Making internal calls

Internal calls to other handsets registered on the same base are free.

Calling a specific handset

Initiate internal call.



handset.

or:

Select handset.

Press the talk key.

Calling all handsets ("group call")

Press and **hold**.

or:

Initiate internal call.

* A Press the star key.

or

Call All Select

Press the talk key.

All handsets are called.

Ending a call

Press the end call key.

Using the directory and lists

Directory

You can save up to 500 entries in the directory.

Open the directory in idle status using the \Box key.

Length of the entries

3 numbers: each max. 32 digits

First name and

surname: each max. 16 characters E-mail address: max. 64 characters

Saving a number in the directory

▶ You can enter data in the following fields:

First Name:/Surname:

Enter first names and/or surnames. (For instructions on entering text and special characters, please see → page 36.)

Phone (Home):/Phone (Office):/Phone (Mobile):

Enter a number in at least one of the fields.

E-mail:

Enter the e-mail address.

Anniversary:

Select On or Off.

With setting On:

Enter Annivers. (Date) and Anniversary (time) and select reminder type: Anniversary (tone) (→ page 19).

Caller Melody (VIP):

Mark a directory entry as a VIP (Very Important Person) by assigning a specific ringtone to it. Prerequisite: Calling Line Identification Presentation (CLIP).

Using the directory and lists

Caller Picture:

If required, select a picture to be displayed when this person calls (see "Using the Resource Directory", page 31).

Prerequisite: Calling Line Identification

Presentation (CLIP).

Save

Press the display key.

Selecting a directory entry

Open the directory.

You have the following options:

- ◆ Use □ to scroll through the entries until the required name is selected.
- Enter the first letters of the name (max. 8), if necessary scroll to the entry with the key.

Selecting from the directory



Press the talk key.

(If several numbers are entered, select the required number by pressing ① and press the talk key again).

The number is dialled.

Managing directory entries

Viewing entries

Viow

View

Press the display key. The entry is displayed.

Options

Press the display key.

The following functions can be selected with **\(\frac{1}{2} \)**:

Display Number

To edit or add to a saved number, or to save it as a new entry, press → □ after the number is displayed.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 19).

vCard via SMS: Send a single entry in vCard format via SMS.

vCard via Bluetooth: Send a single entry in vCard format via Bluetooth.

Editing entries

View Edit Press the display keys one after the other.

Perform changes and save.

Using other functions

→ Options (Open menu)

The following functions can be selected with \diamondsuit :

Display Number

Edit or add to a saved number and then dial with or save as a new entry; to do so, press after the number is displayed.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 19).

vCard via SMS: Send a single entry in vCard format via SMS.

vCard via Bluetooth: Send a single entry in vCard format via Bluetooth.

Delete All

Delete **all** entries in the directory.

Copy All

to Internal: Send the complete list to a handset (→ page 19).

vCard via Bluetooth: Send the complete list in vCard format via Bluetooth.

Available Memory

Display the number of entries that are still available in the directory (→ page 17).

Using quick dial keys

Press and hold the required quick dial key
 (→ page 28).

Transferring the directory to another handset

Prerequisites:

- The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.
- → Options (Open menu)
- → Copy Entry / Copy All
- → to Internal



Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding to the **Entry copied - Copy next entry?** prompt with Yes.

Receiving a vCard with Bluetooth

If a device from the "Known Devices" list (→ page 27) sends a vCard to your handset, this occurs automatically. You are informed about it via the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:



Enter the PIN for the **sending**Bluetooth device and press OK.

The transferred vCard is available as a directory entry.

Copying the displayed number to the directory

You can copy numbers displayed in a list, e.g., the call list or the redial list, or in an SMS, to the directory.

If you have CNIP, the first 16 characters of the transmitted name are copied to the **Surname** line.

A number is displayed:

Options → Copy to Directory

➤ Complete the entry (→ page 17).

Copying a number or e-mail address from the directory

In some operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.

Depending on the operating situation, open the directory with □ or → □.

Select entry (→ page 18).

(

Storing an anniversary in the directory

View Edit Press the display keys one after the other.

Scroll to the **Anniversary** line.

Select **On**.

▶ You can enter data in the following fields:

Annivers. (Date)

Enter day/month/year in 8-digit format.

Anniversary (time)

Enter the hour/minute for the reminder call in 4-digit format.

Anniversary (tone)

Select the reminder type.

Save Press the display key.

Deactivating anniversaries

View Edit Press the display keys one after the other.

Scroll to the **Anniversary** line.

Select **Off**.

Save Press the display key.

Reminder call on an anniversary

In idle status, a reminder call is indicated on the handset display and by the selected ringtone and volume that has been set for internal calls (→ page 30).

You can:

SMS Write an SMS (dependent on

Off Press the display key to

acknowledge and end the

reminder call.

When you are on the phone, a reminder call is indicated on the handset with a single advisory tone.

Anniversaries that are indicated during a call and are not acknowledged are entered in the Missed Alarms list (→ page 22).

Redial list

The redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If one of the numbers is in the directory, the corresponding name is displayed.

Manual redial

Press the key briefly.

Select entry.

Press the talk key again. The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key View.

Managing entries in the redial list

Press the key briefly.

Select entry. Options Open menu.

The following functions can be selected with 🗘:

Copy to Directory

Copy an entry to the directory.

Automatic Redial

The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The talk key flashes; "open listening" is activated.

- Party answers: **Press the talk key** . The function is terminated.
- Party does not answer: The call is terminated after approx. 30 seconds.

The function is terminated after pressing any key or after ten unsuccessful attempts.

Display Number (as in the directory, page 18)

Delete Entry (as in the directory, page 18) **Delete All** (as in the directory, page 18)

Call lists

Prerequisite: Calling Line Identification Presentation (CLIP).

Your telephone stores various types of calls (dependent on base):

- ◆ Outgoing calls (♠)
- ◆ Accepted calls (€)
- ◆ Missed calls (♠)

When in idle status, open the call lists by selecting the Calls display key or via the menu:



List entry

New messages are displayed at the top. Example of list entries:



- ◆ List type (in header)
- Status of entry Bold: New entry
- Number or name of caller
- ◆ Date and time of call (if set).
- ◆ Type of entry

Press the talk key to call the selected caller back.

Select the View display key to access additional information, including for example the number linked to the name. If you have CNIP, then the name and town that is registered with your network provider for this number is displayed. If the name and town are not shown, it means that the caller has not requested Calling Line Identification or that Calling Line Identification has been restricted.

Select the Options display key to select the following options:

Copy to Directory

Delete Entry

Delete All

When you quit the call lists, all entries are set to the status "old", i.e., the next time you call up the list, they will no longer be shown in hold.

Message key function

Opening lists

Use the message key to open the following list selection:

- Network mailbox, if your network provider supports this function and fast access is set for the network mailbox
 (→ page 22).
- Incoming SMS message list (dependent on base)
- Missed calls list
- ◆ Missed alarms list (→ page 22)

An advisory tone sounds as soon as a **new message** arrives in a list.

In **idle status**, the display shows an icon for the new message:

lcon	New message
مه	on the network mailbox
C ×	in the Missed Calls list:
\checkmark	in the SMS list (dependent on base)
	in the Missed Alarms list:

The number of **new** entries is displayed under the corresponding icon.



After pressing the message key , you can see all lists containing messages and the network mailbox list.

Using the network mailbox

Lists containing new messages are at the top of the list and are marked in a bold font.

 


Select a list with . To open, press OK.

Disable/enable flashing of the message key

You can select whether the message key
flashes (default setting) or does not
flash when new messages arrive. Please do
the following:

▶ Press the key sequence:



The following is displayed:



▶ Press one of the following keys to select the message type:



for missed calls for new SMS

for messages on the answering machine (dependent on base)/network mailbox

Your selection is displayed (e.g. 5 for missed calls); the current setting flashes:

 


▶ Press key ① □ or 1 □, to set the behavior for new messages:

message key flashes (it stops when the key is pressed)

or 1 message key does not flash

Your selection is displayed (e.g. 1):



Press the display key OK.

Missed alarms list

Missed (unacknowledged) appointments from the calendar (→ page 23) and anniversaries (→ page 19) are saved in the Missed Alarms list.

Using the network mailbox

The network mailbox is your network provider's answering machine within the network. Ask your network provider about this. You cannot use the network mailbox unless you have **requested** it from your network provider.

ECO DECT

You are helping to protect the environment with your Gigaset handset.

Reducing energy consumption

Your telephone has a power-saving adapter plug and uses less power.

Reducing radiation (dependent on base)

The radiation can only be reduced if your base supports this function.

The transmission power of your telephone is **automatically** reduced depending on the distance to the base.

 
You can further reduce the radiation from the handset and base by using **Eco Mode** or **Eco Mode+**. For further information, please refer to your base user guide.

Setting an appointment (calendar)

You can use your handset to remind yourself of up to **30 appointments**. Anniversaries (→ page 19) entered in the directory are automatically recorded in the calendar.

Saving an appointment

Prerequisite: the date and time have already been set.





- ◆ The current day is selected (highlighted).
- Days on which appointments have already been saved are highlighted.
- Select the required day in the graphical calendar.

The selected day is highlighted. The current day is highlighted in the same colour as the digits.

- Press the centre of the control key.
- ◆ If appointments have already been entered, this will open the list of saved appointments on that day.
 Select <New Entry> → OK to open the data input window.
- If no appointments have been entered, the data input window will open immediately to add the new appointment.
- ▶ You can enter data in the following fields:

Activation:

Select On or Off.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digit format.

Text

The text is displayed as an appointment name.

Signal:

Select the reminder type.

Save Press the display key.

Signalling appointments and anniversaries

An appointment reminder is signalled in idle status for 60 seconds with the selected ringtone at the volume that has been set for internal calls (\rightarrow page 30).

The name is displayed for anniversaries, while the entered text is displayed for appointments along with the time.

You can either deactivate or answer an appointment reminder:

Off

Press the display key to deactivate the appointment reminder.

or (dependent on base):

SMS

Press the display key to respond to the appointment reminder with an SMS.

Managing appointments



Editing individual appointments

₽/\$

Select a day in the graphical calendar on which an appointment has already been saved (digits highlighted) and press control key.

Select appointment for the day.

You have the following options:

View

Press the display key and edit or confirm the entry.

or

Options

Open the menu for editing, deleting and activating/deactivating.

Deleting all appointments for one day

Options → Delete all Appts. → OK

Confirm the security prompt with Yes. **All** appointments are deleted.

Displaying missed appointments, anniversaries

The icon **a** and the number of **new** entries are shown in the display. The most recent entry is at the head of the list.

Open the list by pressing the message key

page 21) or via the menu:

Select appointment/anniversary.

Delete

Delete appointment.

SMS

Write an SMS (dependent on base).

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Setting the alarm clock

Prerequisite: the date and time have already been set.

Activating/deactivating the alarm clock and setting the wake-up time



▶ You can enter data in the following fields:

Activation:

Select On or Off.

Time:

Enter the wake-up time in 4-digit format.

How often:

Select **Daily** or **Monday-Friday**.

Volume:

Set the volume (1–6).

Melody:

Select melody.

Save Press the display key.

In idle status, the (icon and wake-up time are displayed.

The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is only signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (snooze mode)

Prerequisite: A wake-up call is sounding.



Press the display key. The wakeup call is deactivated.

or



Press the display key or any key. © *-. is shown in the display. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition, the wake-up call is deactivated completely.

Using a handset as a room monitor (Babyphone)

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the display keys.

The room monitor call to an external number is terminated after approximately 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker can be switched on or off (Two Way Talk = On or Off). If Two Way Talk is switched on, you can answer the room monitor call.

Warning!

- Always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an external number.
- When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charger. This ensures that the battery does not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

Activating the room monitor and entering the destination number



▶ You can enter data in the following fields:

Activation:

Select **On** to activate.

Alarm to:

Select Internal or External.

External number: Select the number from the directory (press display key) or enter it manually.

Internal number: Select display key
Change → Select handset or Call All to
call all registered handsets → OK.
In idle status, the destination number or
the internal destination number is displayed.

Two Way Talk:

Switch the handset's speaker on or off (select **On** or **Off**).

Sensitivity:

Select noise level sensitivity (**Low** or **High**).

Press Save to save the settings.

Changing the set destination number

→ ★ → Room Monitor

 Enter and save number as described in "Activating the room monitor and entering the destination number"
 (→ page 25).

Cancelling/deactivating the room monitor

Press the end call key to cancel the call when the room monitor is activated.

In idle status, press the display key **OFF** to deactivate room monitor mode.

Deactivating the room monitor remotely

Prerequisites: The phone must support tone dialling and the room monitor should be set for an external destination number.

Accept the call from the room monitor and press keys 9 #.

The room monitor function will deactivate after the call ends. There are no further room monitor calls. The other room monitor settings on the handset (e.g., no ringtone) will remain activated until you press the display key OFF on the handset.

To reactivate the room function with the same phone number:

▶ Reactivate and save with Save(→ page 25).

Using Bluetooth devices

 
Before you can use your Bluetooth device, activate Bluetooth, ensure the devices are visible and then register the handset.

You can register one Bluetooth headset to the handset. You can also register up to five data devices (PCs, PDAs and mobile phones) to send and receive directory entries as vCards or exchange data with the computer (→ page 37).

To use the phone numbers, dialling codes (country and area code) must be stored in the directory (→ page 32).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.

Activating/deactivating Bluetooth mode



Press Change to activate or deactivate Bluetooth mode ($\mathbf{M} = \mathbf{M}$).

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

Please note

- If you register a headset, any headset that is already registered will be overwritten.
- If you would like to use a headset with your handset that is already registered to another device (e.g., to a mobile phone), please deactivate this connection before you start the registration process.

The search can take up to 30 seconds.

Once the device has been found, its name is shown on the display.

Options

Press the display key.

Trust Device

Select and press OK.



Enter the PIN for the Bluetooth device you want to register and press OK.

The device is saved in the list of known devices.

Cancelling/repeating current search

To cancel search:

Cancel

Press the display key.

Repeat search if necessary:

Options

Press the display key.

Repeat Search

Select and press OK.

Editing the list of known (trusted) devices

Open list



A corresponding icon appears next to each device name in the list displayed:

Icon Meaning ₽. Bluetooth headset ᄗ Bluetooth data device

If a device is connected, the corresponding icon is shown in the header of the display instead of .

Viewing entries

Open list → □ (select entry)

View

Press the display key.

Device name and address are displayed.

Go back with OK.

Deregistering Bluetooth devices

Open list → □ (select entry)

Press the display key. Options

Delete Entry

Select and press OK.

Changing the name of a Bluetooth device

Open list → 🖵 (select entry)

Options

Press the display key.

Edit Name Select and press OK.

Save

Change the name. Press the display key

Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

◆ Reject

(a)

Briefly press the end call key.

Accept



Enter the PIN for the Bluetooth device vou want to accept and press OK.

If you have accepted the device, you can use it temporarily (i.e., as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Once the device's PIN has been confirmed

- Save to the list of known devices: press display key Yes.
- Use temporarily: press display key No.

Changing the Bluetooth name of the handset

You can change the handset name used to identify it on the display of another Bluetooth device.

□ → B → Own Device

Change

Press the display key Change the name.



Press the display key

Defining handset settings

Quick dialling numbers and functions

You can assign a **number from the directory** to each of the **digit keys** • and • to • and • warz.

The left and right display keys have a default function. You can change the assignment (→ page 28).

The number is then dialled or the function started by simply pressing a key.

Assigning digit keys

Prerequisite: the digit key has not yet been assigned a number and there is at least one entry in the directory.

Press and hold the digit key or

Press the digit key **briefly** and press the display key QuickDial.

The directory opens.

▶ Select an entry and press OK.

The entry is saved to the corresponding digit key.

Selecting numbers/changing an assignment

Prerequisite: The digit key already has a number assigned to it.

When the handset is in idle status

Press and hold the digit key: The number is dialled immediately.

or

▶ **Briefly** press the digit key.

Press the display key with the number/ name (abbreviated if necessary) to select the number **or**

Press display key Change to change the digit assignment or press display key Clear Key to delete the assignment.

Changing display key assignments

Press and hold the left or right side of the display key.

The list of possible key assignments is opened. The following can be selected:

Room Monitor (→ page 25)

Alarm Clock (→ page 24)

Calendar (→ page 23)

Bluetooth (→ page 26)

Redial (→ page 20)

More Functions...

More features are available:

Call Lists (→ page 20)

INT Make an internal call (→ page 17)

SMS (dependent on base)

Withhold Number (dependent on base)

▶ Select an entry and press OK.

 
Changing the display language

You can view the display texts in different languages.



The current language is indicated by a

.



If you accidentally choose a language you do not understand:

 
Select the correct language and press the **right display key**.

Setting the display

Setting the screensaver/slide show

When in idle status, a picture or a slide show (all the pictures are displayed one after the other) from the Screensaver folder of the Resource Directory (→ page 31) or the time can be displayed as a screensaver. This will replace the idle status display.

If a screensaver is activated, the **Screensaver** menu option is marked with \checkmark .



The current setting is displayed.

▶ You can enter data in the following fields:

Activation:

Select **On** (screensaver is displayed) or **Off** (no screensaver).

Selection:

Select screensaver or

View Press the display key. The selected screensaver is displayed.

Select screensaver and press OK.

Save Press the display key.

Briefly press the end call key **to** return to the idle display.

Setting large font

You can increase the font size of print and symbols in call lists and the directory to improve readability.

Change Press display key ($\mathbf{\Sigma} = \mathbf{on}$).

Setting the colour scheme

You can set the display to be shown in various colour combinations.

Select Colour Scheme (1 to 5) and press Select.

Setting the display backlight

The current setting is displayed.

▶ You can enter data in the following fields:

In Charger

Select On or Off.

Out of Charger

Select On or Off.

Please note

With the **On** setting, the standby time of the handset can be significantly reduced.

Save

Press the display key.

Setting keypad illumination

The brightness of the keypad illumination can be set to one of five levels.

→ → → Display + Keypad→ Keypad Illumination

The current setting is displayed.

▶ Modify the entry:

Brightness:

Select 1 (darkest) to 5 (brightest).

Save

Press the display key.

Activating/deactivating auto answer

If this function is activated, you can simply lift the handset out of the charger without having to press the talk key when you receive a call.



Change

Press display key ($\mathbf{\underline{M}} = on$).

Changing the handsfree/ earpiece volume

In idle status:

Open the menu for setting the call volume.

cali volume.

Set the earpiece volume.

Scroll to the **Speaker** line.

Set the handsfree volume.

Save Press the display key to save the setting.

During a conversation via the earpiece or in handsfree mode:

Press the control key to call up the **Handset Volume** menu. Set

the earpiece or handsfree volume by pressing .

The setting will automatically be saved after approximately 3 seconds, if not then press the display key Save.

Options Open menu.

Volume Select and press OK.

Configure setting (see above).

Setting a handsfree profile

You can set different handsfree profiles to optimally adapt your phone to your environment.

Profile 1

The optimum setting for most connections and set as default.

Profile 2

Optimum volume in handsfree mode. However, this means that the participants cannot speak at the same time as the person speaking is given preferential transmission (making two-way conversations difficult).

Profile 3

Optimises two-way conversations, both callers can hear each other, even if they talk at the same time.

Profile 4

Optimised for special connections. If the default setting (profile 1) does not provide optimum sound, please give this a try.

In idle status:

→ Handsfree Profiles

Select handsfree profile (1 to 4).

Select Press the display key to save the

setting.

During a conversation:

Options Open menu.

Handsfree Profiles

Select and press OK.

Select handsfree profile (1 to 4).

Select Press the display key to save the

setting.

Changing ringtones

Setting volume/melodies

In idle status:

→ Ringtones(Handset)

→ Volume/Melodies

Set the volume for internal calls and appointments or melody

for internal calls.

Scroll to the next line.

Setting volumes/melodies for

external calls.

Save Press the display key to save the

setting.

For external calls, you can also:

Specify a time period when you do not want the telephone to ring, e.g., during the night.

→ Ringtones(Handset) → Time Control

For external calls:

Select On or Off.

If time control is activated:

Suspend ring. from:

Enter the start of the period in 4-digit for-

Suspend ring. until:

Enter the end of the period in 4-digit for-

Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody in the directory (VIP).

Activating/deactivating the ringtone for unknown calls.

You can set your phone not to ring for calls where Calling Line Identification has been restricted. The call will only be signalled on the display.

In idle status:



- → Ringtones(Handset)
- → Anon, Calls Silent

Press Change to activate or deactivate the function ($\mathbf{M} = \mathsf{on}$).

Silent alert

Incoming calls and other messages are indicated by a silent alert.

In idle status:

→ Silent Alert

Press Change to activate or deactivate the silent alert ($\overline{M} = on$).

Activating/deactivating the ringtone/silent alert

You can:

- Permanently deactivate the ringtone in idle status or when receiving a call
- ◆ Deactivate the ringtone and silent alert for the current call

The ringtone cannot be re-activated while a call is in progress.

Deactivating the ringtone permanently

***** △ Press and **hold** the star key.

The Δ icon appears in the display.

Reactivating the ringtone

***** △ Press and hold the star key.

Deactivating the ringtone/silent alert for the current call

Silence Press the display key.

Activating/deactivating the alert tone

★ △ Press and hold the star key and within 3 seconds:

> Press the display key. A call will now be signalled by one short alert tone.

- appears in the display.

Using the Resource Directory

The resource directory on the handset manages sounds, which you can use as ringtones, and pictures, which you can use as caller pictures or as screensavers. Prerequisite: Calling Line Identification Presentation (CLIP).

You can download pictures and sounds from a PC (→ page 37). If there is not enough memory available, you must first delete one or more pictures or sounds.

Playing back sounds/viewing caller pictures

→ Screensavers / Caller Pictures /

Sounds (select entry)

Pictures:

Beep

View

Press the display key. The selected picture is displayed. Switch between pictures using the 🖨 key.

Defining handset settings

If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.

Sounds:

Switch between the sounds using the key. You can set the volume during playback.

Options Open menu.

Volume Select and press OK.

Set volume.

Save Press the display key.

Deleting/renaming a picture/ sound

You have selected an entry.

Options Open menu.

You can select the following functions:

Delete Entry

The selected entry is deleted.

Rename

Change the name (max. 16 characters) and press Save. The entry is stored with the new name.

Checking the memory capacity

You can check how much memory is available for screensavers, sounds and caller pictures.

→ Capacity

Activating/deactivating advisory tones

- ◆ **Key tones**: every key press is confirmed.
- Acknowledge tones:
 - Confirmation tone: at the end of an entry/setting and when an SMS or a new entry arrives in the call list
 - Error tone: when you make an incorrect entry
 - Menu end tone: when scrolling to the end of a menu
- ◆ **Battery**: the battery needs charging.

In idle status:

→ Advisory Tones

▶ You can enter data in the following fields:

Key Tones:

Select **On** or **Off**.

Confirmation:

Select On or Off.

Battery:

Select On or Off.

Save

Press the display key.

Setting your own area code

To transfer phone numbers (e.g., in vCards), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already preset.

Check that the (pre)set area code is correct.

▶ You can enter data in the following fields:

Select/change input field.

Navigate in the input field.

If necessary, delete number

If necessary, delete number: press the display key.

Enter number.

Press the display key.

 
Restoring the handset default settings

The following settings are **not** affected by a reset:

- ◆ Registration of the handset to the base
- ◆ Date and time

Save

- Entries in the calendar
- Entries in the directory, call lists, SMS lists (depending on the base) and the contents of the resource directory



Service (Customer Care)

Questions? For rapid assistance, refer to this user guide or visit www.gigaset.com/pro. The trade outlet will be happy to help with further questions relating to your Gigaset SL610H PRO.

Ouestions and answers

If you have any questions about the use of your phone, you can contact us 24/7 at www.gigaset.com/pro.

The table below contains a list of common problems and possible solutions.

Registration or connection problems with a Bluetooth headset.

- Reset the Bluetooth headset (see the user guide for your headset).
- Delete registration data from the handset when deregistering the device (→ page 27).
- ▶ Repeat the registration process (→ page 26).

The display is blank.

- 1. The handset is not switched on.
 - ▶ Press and **hold** the end call key <a>□.
- 2. The battery is empty.
 - Charge the battery or replace it (→ page 9).

Not all menu items are displayed.

The menu view is simplified.

 Activate complete menu view (expert mode (a)) (→ page 14).

"No Base" flashes on the display.

- 1. The handset is outside the range of the base.
 - ▶ Move the handset closer to the base.
- 2. The base's range is reduced because Eco Mode is activated.
 - Deactivate Eco Mode (→ page 23) or reduce the distance between the handset and the base.
- 3. The base is not switched on.
 - ▶ Check the base power adapter.

"Please register handset" flashes on the display.

Handset has not been registered with the base or has been deregistered.

▶ Register the handset (→ page 10).

Handset does not ring.

- 1. The ringtone is deactivated.
 - Activate the ringtone (→ page 31).
- 2. Call divert set for "All Calls".
 - Deactivate call divert.
- 3. The phone only rings if the phone number has been transferred.
 - Activate the ringtone for unknown calls (→ page 31).

The other party cannot hear you.

You have pressed the mute button 🐌. The handset is "muted".

▶ Reactivate the microphone (→ page 17).

You hear an error tone when keying an input.

Action has failed/invalid input.

 Repeat the process.
 Watch the display and refer to the user guide if necessary.

Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated. As a pixel is made up of three sub-pixels (red, green, blue), it is possible that pixel colours may vary.

This is completely normal and does not indicate an error.

Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: www.qigaset.com/docs

€ 0682

Protecting our environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

ISO 14001 (Environment): certified since September 2007 by TüV SÜD Management Service GmbH.

ISO 9001 (Quality): certified since 17/02/ 1994 by TüV SÜD Management Service GmbH.

Ecological energy consumption

The use of ECO DECT (→ page 23) saves energy and makes an active contribution towards protecting the environment.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Appendix

Caring for your telephone

Wipe the charger and handset with a **damp cloth** (do not use solvent or a microfiber cloth) or an **antistatic cloth**.

Never use a dry cloth as this can cause static.

Contact with liquid /!



If the handset should come into contact with liquid:

- 1. Switch the handset off and remove the battery immediately.
- 2. Allow the liquid to drain from the handset.
- Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.).
- 4. Do not switch on the handset again until it is completely dry.

When it has fully dried out, you will usually be able to use it again.

Specifications

Batteries

Technology: Lithium ion (Li-Ion):

Voltage: 3.7 V Capacity: 750 mAh

Type: V30145-K1310-X445

The handset is supplied with the recommended battery. Only an original battery may be used.

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

www.gigaset.com/customercare

The device is supplied with the recommended battery.

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Standby time (hours) *	230/95
Talktime (hours)	14
Operating time for 1.5 hrs of calls per day (hours) **	120
Charging time in charger (hours)	3

- without/with display backlight
- ** without display backlight ("Setting the display backlight" → page 29)

General specifications

DFCT

DECT	
DECT standard	Is supported
GAP standard	Is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Pulse repetition rate	100 Hz
Pulse transmission length	370 μs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel 250 mW pulse power
Range	Up to 300 m outdoors, up to 50 m indoors
Environmental conditions in operation	+5°C to +45°C, 20% to 75% relative humidity

Appendix

Bluetooth

Radio frequency range	2402-2480 MHz
Transmission power	4 mW pulse power

Writing and editing text

The following rules apply when writing text:

- ◆ Each key between ① → and ⑨ waz is assigned several letters and characters.
- ◆ Control the cursor with ① □ □ □. Press and **hold** ① or □ to move the cursor **word by word**.
- Characters are inserted at the cursor position.
- Press the star key * a to display the table of special characters. Select the required character and press the display key Insert to insert the character at the cursor position.
- Press display key < C to delete the character to the left of the cursor. Press and hold to delete the word to the left of the cursor.
- The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key # - to change the text input mode.

123	Writing digits
Abc	Upper case *
abc	Lower case

^{*} First letter in capitals, all others in lower case

The active mode is indicated at the bottom right of the screen.

Writing names/an SMS (depending on the base)

▶ Enter the individual letters/characters by pressing the corresponding key.

The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.

Briefly press the key several times in succession to select the required letter/character.

Standard characters

	•	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
	1 ∞	1									
	2 ABC	a	b	С	2	ä	á	à	â	ã	ç
	3 DEF	d	е	f	3	ë	é	è	ê		
	4 сні	g	h	i	4	ï	í	ì	î		
	5 ж.	j	k	ı	5						
	6 ммо	m	n	0	6	ö	ñ	ó	Ò	ô	õ
	7 PQRS	р	q	r	S	7	ß				
	8 TUV	t	u	٧	8	ü	ú	ù	û		
-	9 wxyz	w	Х	у	Z	9	ÿ	ý	æ	Ø	å
	0 -	1)		,	?	!	← ^{z)}	0			

- 1) Space
- 2) Line break

Accessing additional functions via the PC interface

To enable your handset to communicate with the PC, the "Gigaset QuickSync" program must be installed on your PC (free to download at www.qigaset.com/pro/qigasetSL610PRO).

Transferring data

After installing "Gigaset QuickSync", connect the handset to your computer (→ page 12) using Bluetooth (→ page 26) or a USB data cable.

Please note

Operating both connections in parallel will not allow you to use all features simultaneously.

Start the "Gigaset QuickSync" program. You can now synchronise your handset directory with Outlook; download caller pictures (.bmp) and images (.bmp) as a screensaver and sounds (ringtones) from the computer to the handset (and vice versa).

During the transfer of data between handset and PC, you will see **Data transfer in progress** on the display. During this time the keypad is disabled and incoming calls will be ignored.

Completing a firmware update

- Connect your phone to your PC using a USB data cable (→ page 12).
- Start the "Gigaset QuickSync" program on your PC.
- ▶ Establish a connection to your handset.
- ▶ Select [Settings] → [Device properties] to open the [Device] tab.
- ▶ Click on [Firmware update].

This launches the firmware update.

The update process can take up to 10 minutes (not including the download time). Do not interrupt the process or remove the USB data cable.

The data is initially loaded from the update server on the Internet. The amount of time this takes is dependent on the speed of your Internet connection.

The display on your phone is switched off and the message key and the talk key start flashing.

Once the update is complete, your phone will automatically restart.

Procedure in the event of an error


If the update procedure fails or your phone does not work properly following the update, repeat the update procedure as follows:

- Close the "Gigaset QuickSync" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 9).
- ▶ Replace the battery.
- Complete the firmware update as described.

Accessing additional functions via the PC interface

If the update procedure fails several times or you can no longer connect to the PC, proceed as follows:

- Close the "Gigaset QuickSync" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 9).
- ▶ Press and hold keys 4 GHI and 6 MNO with the index and middle finger.

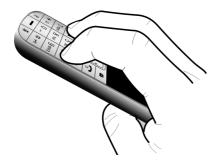

- ▶ Replace the battery.
- ▶ Release keys 4 ⊶ and 6 ⊶ . The message key and the talk key ✓ will flash alternately.
- Complete the firmware update as described.

Accessories

Ordering Gigaset products

You can order Gigaset products from your specialist retailer.



Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

Index Bluetooth Α list of known devices 27 Acknowledge tones 32 registering devices 26 Activating advisory tones 32 Call keypad lock 13 Alert tone 31 Calling Caring for your telephone................. 35 Changing Appointment/anniversary destination number (room monitor) . . 26 display missed 24 **Appointments** earpiece volume 30 activating/deactivating............ 24 ringtone 30 managing 24 Changing device name (Bluetooth) 27 Area code setting own area code 32 Charge status display 2, 3 Assigning a number key 28 Confirmation tone 32 Automatic Connecting the headset 12 D Deactivating advisory tones 32 Backlight Base setting up8 Battery charging 2, 3 Deregistering devices (Bluetooth) 27 Destination number (room monitor) 25 Dialling tone 32 Birthday, see Anniversary

Index

Directory	Н
copying number from text	Handset
managing entries	activating/deactivating13
saving anniversary	advisory tones
saving entry	colour scheme
sending entry/list to handset 19	contact with liquid
using to enter numbers	deregistering
Display	display backlight29
backlight	display language 28
changing display language 28	earpiece volume 30
colour scheme	handsfree volume 30
directory memory	idle status
in idle status	keypad illumination 29
memory (resource directory) 32	large font
missed anniversaries	muting 17
missed appointments/anniversaries 24	registering 10
screensaver	restoring to default settings 32
setting 29	screensaver
slide show	set up for use9
Display keys 2, 4	setting
assigning 28	using room monitor
Disposal 34	Handset mode
E	Handset operating time
ECO DECT 23	in room monitor mode
E-mail address	Handsfree
copying from the directory 19	key2
End call key	profile
Ending	Hash key
call	Headset (Bluetooth)
Entry	Hearing aids
select from directory	Help 33
Error tone	1
Expert mode14	lcon
·	alarm clock
F	for new messages 21
Firmware update	keypad lock
Flashing of the message key	ringtone
disable/enable22	Idle status
G	returning to
General troubleshooting	Idle status (display)11, 13
Group call	Illumination
Group Carl 1/	keypad29
	Internal call

K	Menu
Key	end tone
assigning to a function or number 28	overview
Key 1 (fast access)	using 13
Keypad illumination 29	Menu view
Keypad lock	complete (expert mode) 14
Keys	simplified 14
control key 2, 12	Message key
delete key	disable/enable flashing 22
display keys	opening lists 21
end call key	Microphone2
fast access2	Missed
handsfree key2	anniversary 24
hash key	appointment 24
message key2	Missed calls
mute key	Mute key
on/off key	Muting the handset 17
quick dial19	N
recall key	••
star key	Network mailbox
talk key	Night mode see Time Control
,	Number
L	as destination for room monitor 25
Language	copying from directory
display 28	copying to the directory
Large font	entering with directory
List	saving in directory 17
call lists 20	0
known devices (Bluetooth) 27	On/Off key2
missed calls	One Touch Call
network mailbox 21	
SMS incoming message list 21	Р
Lock	Package contents8
activating/deactivating keypad lock 13	PC Interface 37
M	Picture
Making calls	caller
accepting a call	deleting 32
external	renaming 32
internal	Power adapter
Manual redial	Protecting our environment 34
Medical equipment	0
Memory	~
directory	Questions and answers
resource directory	Quick dial 28
resource directory	

Index

R	Т
Range8	Talk key
Recall key2	Time Control (Night mode) 30
Redial	Two Way Talk (room monitor) 25
Registering (handset)10	U
Registering devices (Bluetooth) 26	•
Reminder call 20	Unknown call off
Resource directory	Update
Ring delay	USB connection
Ringtone	Using the central key
changing 30	Using the control key 2, 12
setting volume	V
Room monitor	Volume
S	handset handsfree volume 30
Screensaver29	ringtone 30
Search directory	
Sending	W
directory entry to handset 19	Warning tone, see Advisory tones
Sensitivity (room monitor)	Writing and editing text 36
Service	
Setting the date15	
Setting the time	
Setting up	
base	
handset	
Signal tone, see Advisory tones	
Silent alert	
Slide show	
SMS	
incoming message list	
writing	
Snooze mode	
Sound, see Ringtone	
Specifications	
Star key2	

Issued by

Gigaset Communications GmbH
Frankenstraße 2a, D-46395 Bocholt

Gigaset Communications GmbH 2011
All rights reserved. Subject to availability.
Rights of modification reserved.

www.gigaset.com