

# Gigaset

## S810H

### Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit [www.gigaset.com](http://www.gigaset.com).



GIGASET. INSPIRING CONVERSATION.  
MADE IN GERMANY



## The handset at a glance



- 1 **Display** in idle status
- 2 **Battery charge status** (→ page 12)
- 3 **Side keys**  
Set call (→ page 36) or  
ringtone volume (→ page 37)
- 4 **Display keys** (→ page 14)
- 5 **Message key** (→ page 27)  
Access to Call and Message Lists;  
Flashes: new message or new call
- 6 **End call key, On/Off key**  
End call, cancel function, go back one menu level  
(press briefly), back to idle status (press and hold),  
activate/deactivate handset (press and hold in  
idle status)
- 7 **Hash key**  
Keypad Lock on/off (press and hold in idle status);  
Toggles between upper/lower case and digits
- 8 **Mute key** (→ page 22)  
Mute the microphone
- 9 **Microphone**
- 10 **Recall key**  
- Consultation call (flash)  
- Insert a dialling pause (press and hold)
- 11 **Star key**  
Ringtone on/off (press and hold);  
with an open connection: switch between pulse  
dialling/tone dialling (press briefly);  
text input: open table of special characters
- 12 **Headset socket**
- 13 **Key 1**  
Dial Network Mailbox (press and hold)
- 14 **Talk key**  
Flashes: incoming call;  
Accept a call; open Redial List (press briefly); start  
dialling (press and hold);  
When writing an SMS: send SMS
- 15 **Handsfree key**  
Switch between earpiece and handsfree mode
- 16 **Control key** (→ page 12)
- 17 **Signal strength** (→ page 12)  
Green: Eco Mode (→ page 29) activated


Illustration of handset on a base with SMS functionality.

### Please note

If you have any questions about using your phone, please contact our Customer Care team (→ page 40).

## Display symbols

The following symbols are displayed dependent on the settings and the operating status of your telephone:

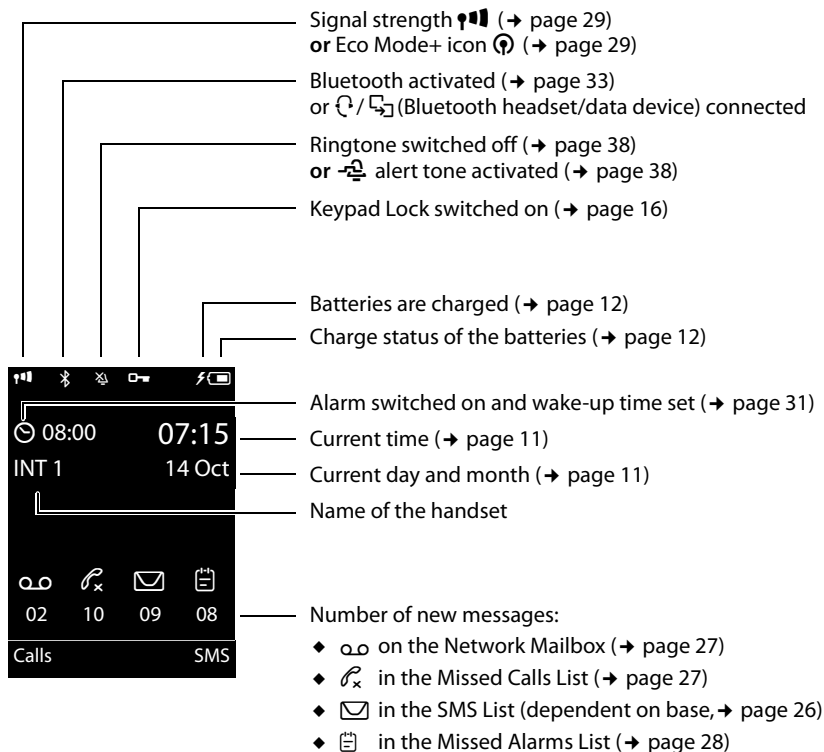

### Signalling

External call (→ page 21)



Alarm (→ page 31)



Internal call (→ page 22)



Anniversary (→ page 29)



Appointment (→ page 29)



# Contents

---

<b>The handset at a glance .....</b>	<b>1</b>
<b>Display symbols .....</b>	<b>2</b>
<b>Safety precautions .....</b>	<b>5</b>
<b>First steps .....</b>	<b>5</b>
Checking the package contents .....	5
Setting up the charger .....	6
Connecting the charger .....	6
Setting up the handset for use .....	7
Changing the display language .....	9
Registering the handset .....	10
Setting the date and time .....	11
Connecting the USB data cable .....	13
<b>Using the phone .....</b>	<b>13</b>
Using the control key .....	13
Using the display keys .....	14
Using the keys on the keypad .....	14
Using the side keys .....	15
Correcting incorrect entries .....	15
Using the menus .....	15
Activating/deactivating the handset .....	16
Activating/deactivating Keypad Lock .....	16
Using this guide .....	17
<b>Menu overview .....</b>	<b>19</b>
<b>Making calls .....</b>	<b>21</b>
Making an external call .....	21
One Touch Call .....	21
Ending a call .....	21
Accepting a call .....	21
Using handsfree mode .....	22
Switching to mute .....	22
Making internal calls .....	22
<b>Using the Directory and lists .....</b>	<b>23</b>
Using the Directory .....	23
Using the Redial List .....	26
Using the Incoming SMS Message List (dependent on base) .....	26
Using the Call Lists .....	27
Message key function .....	27
Using the Missed Alarms List .....	28
<b>Using the Network Mailbox .....</b>	<b>28</b>
<b>ECO DECT .....</b>	<b>29</b>
<b>Setting an appointment (Calendar) .....</b>	<b>29</b>
Displaying missed appointments, anniversaries .....	30

**Setting the Alarm Clock ..... 31**

**Using a handset as a Room Monitor (Babyphone) ..... 31**

**Using Bluetooth devices ..... 33**

**Setting up the handset ..... 34**

Quickly accessing numbers and functions ..... 34

Changing the display language ..... 35

Setting the display ..... 35

Setting keypad illumination ..... 36

Activating/deactivating Auto Answer ..... 36

Changing the speaker/earpiece volume ..... 36

Setting a handsfree profile ..... 37

Changing ringtones ..... 37

Using the Resource Directory ..... 38

Activating/deactivating Advisory Tones ..... 39

Setting your own area code ..... 39

Restoring the handset default settings ..... 39

**Service (Customer Care) ..... 40**

Authorisation ..... 40

**Guarantee Certificate United Kingdom ..... 41**

**Guarantee Certificate Ireland ..... 41**

**Caring for your environment ..... 42**

**Appendix ..... 43**

Caring for your telephone ..... 43

Contact with liquid ..... 43

Specifications ..... 43

Writing and editing text ..... 44

**Accessing additional functions via the PC interface ..... 45**

**Accessories ..... 46**

**Mounting the charger on the wall ..... 46**

**Index ..... 47**

## Safety precautions

### Warning

Be sure to read this user guide and the safety precautions before using your telephone. Explain their content and the potential hazards associated with using the telephone to your children.

- ◆ Use only the power adapter supplied, as indicated on the underside of the base.
- ◆ Use only **rechargeable batteries** that correspond to the **specification provided on page 43**, as this could otherwise result in significant health risks and personal injury.
- ◆ Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment e.g., doctor's surgery.  
If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high-frequency energy. Please refer to the "Appendix" chapter for the specifications of this Gigaset product.
- ◆ Do not hold the rear of the handset to your ear when it is ringing or when handsfree mode is activated. Otherwise you risk serious and permanent damage to your hearing.  
Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.  
The handset may cause an unpleasant humming or whistling noise in hearing aids or cause them to overload. If you require assistance, please contact the hearing aid supplier.
- ◆ Do not install the charger in bathrooms or shower rooms. The charger is not splashproof (→ page 43).
- ◆ Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).
- ◆ If you give your Gigaset to a third party, make sure you also give them the user guide.
- ◆ Remove faulty bases from use or have them repaired by our Service, as they could interfere with other wireless services.

### Please note

- ◆ Not all of the functions described in this user guide are available in all countries.
- ◆ The device cannot be used in the event of a power failure. It is also **not** possible to transmit emergency calls.

## First steps

### Checking the package contents

- ◆ One Gigaset S810H handset
- ◆ Two batteries
- ◆ One battery cover
- ◆ One charger
- ◆ One power adapter
- ◆ One belt clip
- ◆ One plastic headset socket cover
- ◆ One user guide

## Setting up the charger

The charger is designed for use in dry rooms in a temperature range of +5°C to +45°C.

- ▶ Place the charger on a level, non-slip surface or mount it on the wall (→ page 46).

### Please note

Pay attention to the range of the base.

This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings.


The range is reduced when Eco Mode (→ page 29) is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

### Please note:


- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

## Connecting the charger

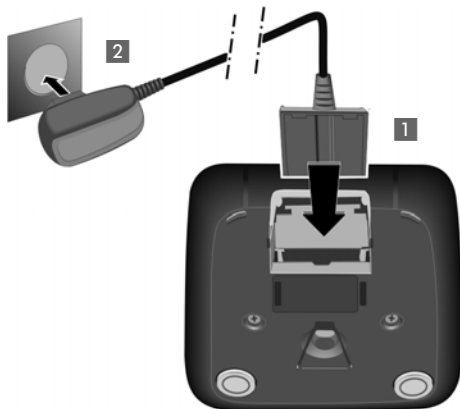

- ▶ Connect the flat plug from the power adapter **1**.
- ▶ Plug the power adapter into the plug socket **2**.

To disconnect the plug from the charger, press the release button **3** and disconnect the plug **4**.

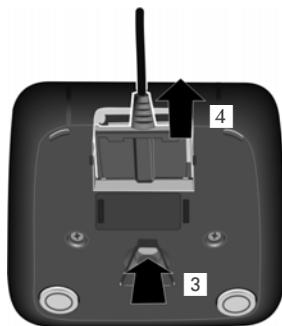



## Setting up the handset for use

The display and keypad are protected by plastic films.


**Remove the protective films!**

### Inserting the batteries and closing the battery cover

#### Warning

Use only rechargeable batteries recommended by Gigaset Communications GmbH (→ page 43), i.e., never use a conventional (non-rechargeable) battery, as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries with the polarity in the correct direction.  
The polarity is indicated in/on the battery compartment.

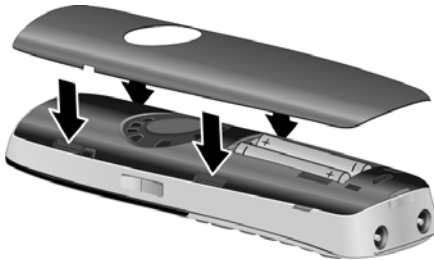


- ▶ First insert the battery cover at the top.
- ▶ Then press the cover until it clicks into place.

To open the battery cover, for instance to replace the batteries, insert a coin into the cavity on the left-hand side of the casing, then pull the battery cover in an upward direction.




- ▶ Insert the plastic cover provided for the headset socket to ensure optimum sound in handsfree mode.

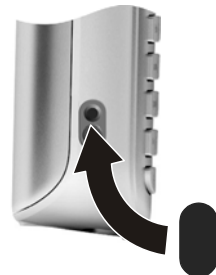

### Attaching the belt clip

The handset has notches on each side to attach the belt clip.

- ▶ **To attach** – press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.
- ▶ **To remove** – press the centre of the belt clip firmly with your right thumb, push the fingernail of your left index finger up between the clip and the housing and pull the clip in an upward direction.

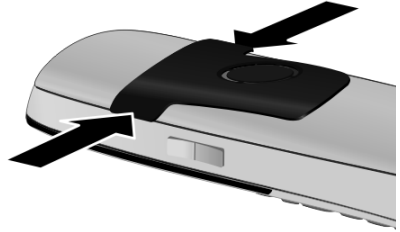

### Initial charging and discharging of the batteries

The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.



Charge the handset in the charging cradle for **8.5 hours**.

#### Please note

The handset must only be placed in the designated Gigaset S810/S810A base or charging cradle.


- ▶ After charging, remove the handset from the charging cradle and only replace it when the batteries are **fully discharged**.

#### Please note

- ◆ After the initial battery charge **and** discharge, you may place your handset in the base after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

## Changing the display language

Change the display language if you do not understand the language currently set.

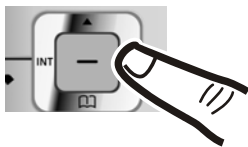


- ▶ Press right on the control key.




- ▶ **Slowly** press keys **9 WXYZ** and **5 JKL** one after the other.



The display for setting languages appears. The current language (e.g. English) is selected.

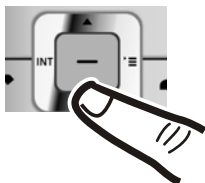


- ▶ Press down on the control key  ...




... until the language you wish to use is marked, e.g., French.

- ▶ Press the **right** key directly below the display to select this language.



The selection is marked with .

- ▶ Press and **hold** the end call key  to return to idle status.

## Registering the handset

A Gigaset S810H handset can be registered on up to four bases. You must initiate handset registration on the handset (1) and on the base (2).

When the registration process has completed successfully, the handset returns to idle status. The handset's internal number is shown in the display, e.g., **INT 1**. If not, repeat the procedure.

### 1) On the handset



- Press the key below **Register** on the display screen.

A message appears stating that the handset is searching for a base that is ready for registration.

#### Please note

If the handset is already registered to **at least one base**, start the registration process as follows:

 →  → **Registration** → **Register Handset**

If the handset is already registered to **four** bases, select the required base.

### 2) On the base

Within 60 sec. press and **hold** the registration/paging key on the base (approx. 3 sec.).

#### Please note

For instructions on deregistering the handsets, please consult the base user guide.

## Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.




- ▶ Press the key below **Time** on the display screen to open the input field.  
(If you have already set the time and date, open the input field via the menu, → page 20.)




The **Date/Time** submenu is shown on the display.

- ▶ The active input position flashes.  
Enter day, month and year as an 8-digit number via the keypad,  
e.g.,         for 14/10/2011.

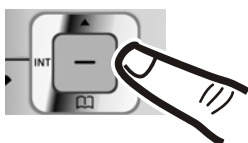

Press the **right** or **left** control key to change the input position and correct an entry.

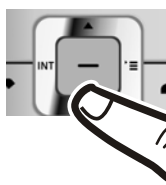


- ▶ Press **down** on the control key to switch to the Time input field.

- ▶ Enter the hours and minutes as four digit numbers via the keypad,  
e.g.,     for 07:15 am.  
Change the input position with the control key if necessary.





- ▶ Press the key below **Save** on the display screen to confirm your entry.

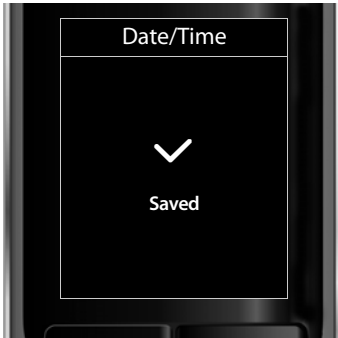





The display shows **Saved**. You will hear a confirmation tone and the handset will automatically return to idle status.

## Display in idle status

Once the phone is registered and the time is set, the idle status is shown as in this example.










### Displays


- ◆ Reception between the base and the handset:

- Poor to good:   
- No reception: 

**Green:** Eco Mode (→ page 29)

- ◆ Charge status of the batteries:

-  white: charged over 66%
-  white: charged between 34% and 66%
-  white: charged between 11% and 33%
-  red: charged below 11%
-  flashes red: battery almost empty (less than 10 minutes talktime)
-     white: battery charging

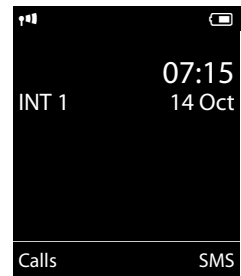


### Please note

If you have chosen a colour scheme with a white background, the white symbols are displayed in black.

## ◆ INT 1


Internal name of the handset

If **Eco Mode+** (→ page 29) is activated, the  icon is displayed in the top left corner of the display.

**Your phone is now ready for use!**

## Connecting the USB data cable

To connect the handset to a PC, you can connect a standard USB data cable with a mini-B connector to the back of your handset (→ page 45).

- ▶ Remove the belt clip (if attached) (→ page 8).
- ▶ Remove the battery cover (→ page 7).
- ▶ Connect the USB data cable to a USB socket .



### Please note

Please connect your handset **directly** to the PC; do **not** connect via a USB hub.




## Using the phone




### Using the control key

The side of the control key that you must press in the respective operating situation is marked in black below (top, bottom, right, left, centre), e.g.,  for "press right on the control key" or  for "press the centre of the control key".

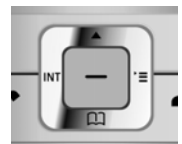



The control key has a number of different functions:



#### When the handset is in idle status



-  Open the Directory.
-  Open the main menu.
-  Open the Handsets list.

#### In the main menu

- , ,  or 
- Navigate to the required function.

## Using the phone




### In submenus and lists

 /  Scroll up/down line by line.

### In input fields

Use the control key to move the cursor up , down , right  or left . Press and hold  or  to move the cursor **word by word**.

### During an external call

-  Open the Directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

### Functions when pressing the middle of the control key

Depending on the operating situation, the key has different functions.


- ◆ **In idle status**, the key opens the main menu.
- ◆ **In submenus, selection and input fields**, the key takes on the function of the display keys **OK**, **Yes**, **Save**, **Select** or **Change**.

#### Please note

These instructions demonstrate the main menu being opened by pressing the right of the control key and functions being actuated by pressing the appropriate display key. However, if you prefer, you can use the control key as described above.

## Using the display keys

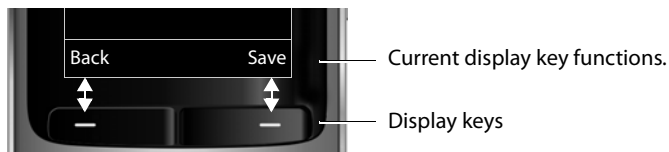


The functions of the display keys change depending on the particular operating situation. Example:



Some important display keys:

<b>Options</b>	Open a menu for further functions.
<b>OK</b>	Confirm selection.
<b>&lt; C</b>	Delete key: delete character by character/word by word from right to left.
<b>Back</b>	Go back one menu level or cancel operation.
<b>Save</b>	Store entry.
<b>→→</b>	Open the Redial list.

## Using the keys on the keypad

 /  /  etc.

Press the matching key on the handset.



Enter digits or letters.



## Using the side keys



Press the keys on the right of the handset to set the volume for the **handset**, **ringtone**, **speaker**, **alarm**, signalling of **appointments** and the **headset** depending on the situation.


## Correcting incorrect entries


You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Delete the **character** to the left of the cursor with the display key **<C** (press and hold to delete the **word**)
- ◆ Insert characters at the cursor position
- ◆ Overwrite the highlighted (flashing) character, e.g., when entering time and date.

## Using the menus


Your telephone's functions are accessed using a menu that has a number of levels.

The menu display can be complete (**expert mode** ) or restricted (**standard mode**). Expert mode is the active default setting.

Settings or functions that are only available in expert mode are marked in these instructions with the  icon.


Switching between standard mode/expert mode and the menu overview (→ page 19).



### Main menu (first menu level)


- ▶ When the handset is in idle status, press the **right** control key  to open the main menu.

The main menu functions are shown in the display with icons. The icon for the selected function is highlighted and the name of the associated function appears in the display header.

To access a function, i.e., to open the corresponding sub-menu (next menu level):

- ▶ Use the control key  to select the required function and press the display key **OK**.


**Briefly** press the display key **Back**  or the end call key  to revert back to idle status.

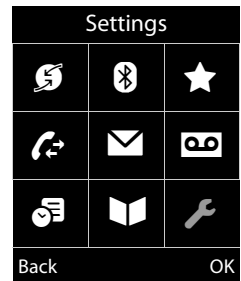


### Submenus

The functions in the submenus are displayed as lists (example on the right).

To access a function:


- ▶ Scroll to the function with the control key  and press **OK**.

**Briefly** press the display key **Back** or the end call key  to return to the previous menu level/cancel the operation.

Settings	
<hr/>	
Date/Time	
<hr/>	
Audio Settings	
Display	
Language	
Registration	
<hr/>	
Back	OK

### Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display keys **OK**, **Yes**, **Save** or **Change** are lost.

For an example of the display in idle status (→ page 12).

## Activating/deactivating the handset



With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.

Press and **hold** the end call key again to switch the handset on.

#### Please note

When the handset is switched on, an animation showing the **Gigaset** logo is displayed for several seconds.

## Activating/deactivating Keypad Lock

Keypad Lock prevents any inadvertent use of the phone.



Press and **hold** the hash key in idle status to activate or deactivate Keypad Lock. You will hear the confirmation tone.

If Keypad Lock is activated, you will see a message when you press a key.

Keypad Lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

#### Please note



When Keypad Lock is active, you cannot even call emergency numbers.

## Using this guide

The operating steps are shown in abbreviated form.


### Example:

The illustration:


 →  → **Display** → **Large Font** (☑ = on)

means:




- ▶ Press **right** on the control key  to open the main menu.



- ▶ Press right, left, down and up on the control key  to navigate to the **Settings** submenu.


- ▶ Press the display key **OK** to confirm your selection.



- ▶ Press down on the control key  until the **Display** menu option appears on the display.

- ▶ Press the display key **OK** to confirm your selection.




- ▶ Press down on the control key  until the **Large Font** menu option appears on the display.

- ▶ Press the display key **Change** to activate/deactivate the function.





The change is effective immediately and does not need to be confirmed.




- ▶ Press the key below **Back** on the display screen to jump back to the previous menu level.  
or  
Press and **hold** the end call key  to return to idle status.

# Menu overview

## Setting standard mode or expert mode

The menu display can be Complete (**expert mode** ) or Simplified (**standard mode**). Menu options that are only available in expert mode are marked with the  icon.

To change these settings:

Select  →  → **Menu View** → **Simplified** (standard mode) or **Complete** (expert mode)  
→ **Select** (the active mode is marked with )


To open the main menu: press  when the phone is in idle mode.

 **Select Services** (Menu dependent on base)

## Bluetooth

Activation	→ page 33
Search for Headset	→ page 33
Search Data Device	→ page 33
Known Devices	→ page 33
Own Device	→ page 34

## ★ Additional Features

Room Monitor	→ page 31								
One Touch Call	→ page 21								
 Resource Directory	<table><tr><td>Screensavers</td><td>→ page 38</td></tr><tr><td>Caller Pictures</td><td>→ page 38</td></tr><tr><td>Sounds</td><td>→ page 38</td></tr><tr><td>Capacity</td><td>→ page 39</td></tr></table>	Screensavers	→ page 38	Caller Pictures	→ page 38	Sounds	→ page 38	Capacity	→ page 39
Screensavers	→ page 38								
Caller Pictures	→ page 38								
Sounds	→ page 38								
Capacity	→ page 39								

## Call Lists

All Calls	→ page 27
Outgoing Calls	→ page 27
Accepted Calls	→ page 27
Missed Calls	→ page 27

 **SMS** (Menu dependent on base)

 **Voice Mail** (Menu dependent on base)

# Menu overview



## Organizer

Calendar	→ page 29
Alarm Clock	→ page 31
Missed Alarms	→ page 30



## Directory

→ page 23



## Settings

Date/Time	→ page 11												
Audio Settings	<table><tr><td>Handset Volume</td><td>→ page 36</td></tr><tr><td>Handsfree Profiles</td><td>→ page 37</td></tr><tr><td> Advisory Tones</td><td>→ page 39</td></tr><tr><td>Ringtones(Handset)</td><td>→ page 37</td></tr><tr><td>Ringtones (Base)</td><td>(dependent on base)</td></tr><tr><td> Music on hold</td><td>(dependent on base)</td></tr></table>	Handset Volume	→ page 36	Handsfree Profiles	→ page 37	Advisory Tones	→ page 39	Ringtones(Handset)	→ page 37	Ringtones (Base)	(dependent on base)	Music on hold	(dependent on base)
Handset Volume	→ page 36												
Handsfree Profiles	→ page 37												
Advisory Tones	→ page 39												
Ringtones(Handset)	→ page 37												
Ringtones (Base)	(dependent on base)												
Music on hold	(dependent on base)												
Display + Keypad	<table><tr><td>Screensaver</td><td>→ page 35</td></tr><tr><td>Large Font</td><td>→ page 36</td></tr><tr><td>Colour Schemes</td><td>→ page 36</td></tr><tr><td> Display Backlight</td><td>→ page 36</td></tr><tr><td>Keypad Illumination</td><td>→ page 36</td></tr></table>	Screensaver	→ page 35	Large Font	→ page 36	Colour Schemes	→ page 36	Display Backlight	→ page 36	Keypad Illumination	→ page 36		
Screensaver	→ page 35												
Large Font	→ page 36												
Colour Schemes	→ page 36												
Display Backlight	→ page 36												
Keypad Illumination	→ page 36												
Language	→ page 35												
Registration	<table><tr><td>Register Handset</td><td>→ page 10</td></tr><tr><td>De-reg. Handset</td><td>(dependent on base)</td></tr><tr><td>Select Base</td><td>→ page 10</td></tr></table>	Register Handset	→ page 10	De-reg. Handset	(dependent on base)	Select Base	→ page 10						
Register Handset	→ page 10												
De-reg. Handset	(dependent on base)												
Select Base	→ page 10												
Telephony	<table><tr><td>Auto Answer</td><td>→ page 36</td></tr><tr><td></td><td>(further submenus dependent on base)</td></tr></table>	Auto Answer	→ page 36		(further submenus dependent on base)								
Auto Answer	→ page 36												
	(further submenus dependent on base)												
System	<table><tr><td>Handset Reset</td><td>→ page 39</td></tr><tr><td></td><td>(further submenus dependent on base)</td></tr></table>	Handset Reset	→ page 39		(further submenus dependent on base)								
Handset Reset	→ page 39												
	(further submenus dependent on base)												
Menu View	<table><tr><td>Simplified</td><td>→ page 19</td></tr><tr><td>Complete</td><td>→ page 19</td></tr></table>	Simplified	→ page 19	Complete	→ page 19								
Simplified	→ page 19												
Complete	→ page 19												
Eco Mode	<table><tr><td>Eco Mode</td><td>(dependent on base)</td></tr><tr><td>Eco Mode+</td><td>(dependent on base)</td></tr></table>	Eco Mode	(dependent on base)	Eco Mode+	(dependent on base)								
Eco Mode	(dependent on base)												
Eco Mode+	(dependent on base)												

## Making calls

If the backlight is deactivated (→ page 36) it is switched on by pressing any key. **Digit keys** appear on the display for pre-dialling; **all other keys** do not have any further functions.

## Making an external call

External calls are calls using the public telephone network.



Enter the number and press the talk key.

or:



Press and **hold** the talk key and then enter the number.

You can cancel the dialling operation with the end call key.

You are shown the duration of the call while the call is in progress.

### Please note

Dialling with the Directory (→ page 23), Call List (→ page 27), Redial List (→ page 26) and Automatic Redial (→ page 26) saves you from repeatedly keying in phone numbers.

## Continuing a call on a Bluetooth headset

**Prerequisite:** Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 33).

Press the talk key on the headset; it may take up to 5 seconds to establish a connection to the handset.

The menu to set the earpiece and microphone volume can be called up during a call by pressing the side keys.

For further details about your headset, see the accompanying user guide.

## One Touch Call

You can set up your phone in such a way that pressing **any** key dials a previously stored number. This allows children, for example, who cannot enter a number, to call a certain number.

☐ → ★ → One Touch Call

- ▶ Change multiple line input:

### Activation:

Select **On** to activate.

### Call to:

Enter or change number.

- ▶ Press **Save** to save the settings.

When the function is activated, the idle display appears as shown below:



By pressing any key the saved number is dialled. Press the end call key, to cancel the dialling operation or to end the call.

## Deactivating the One Touch Call

- ▶ In **idle status**, press the display key **OFF**.
- ▶ Press and **hold** the hash key, to deactivate the One Touch Call.

## Ending a call



Press the end call key.

## Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key.

Accept the call by:

- ▶ Pressing the talk key.
- ▶ Pressing the handsfree key.
- ▶ Press the **Accept** display key.

If the handset is in the charger and the **Auto Answer** function is activated (→ page 36), the handset automatically answers the call when you remove it from the charger.

## Making calls

To deactivate the ringtone, press the **Silence** display key. You can accept the call as long as it is displayed on the screen.

### Accepting a call on a Bluetooth headset

**Prerequisite:** Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 33).

**Only press the talk key on the headset when the headset rings;** it can take up to 5 seconds.

The menu to set the earpiece and microphone volume can be called up during a call by pressing the side keys.

For further details about your headset, see the accompanying user guide.

## Using handsfree mode

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

## Activating/deactivating handsfree mode

### Activating while dialling



Enter the number and press the handsfree key.

- ▶ Inform your caller before you use the handsfree function so that they know a third party may be listening.


### Switching between earpiece and handsfree mode



Press the handsfree key.

Activate/deactivate handsfree mode during a call.

If you wish to place the handset in the charger during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base/charger and for a further 2 seconds.

For instructions on adjusting the speaker volume (→ page 36).

### Please note

If you have a headset connected, you can switch between the headset and handsfree mode.

## Switching to mute



You can deactivate the microphone in your handset during an external call.



Press key to mute the handset.

The display shows **Microphone is off**. Press the key again to unmute the microphone.

### Please note

- ◆ If the telephone is muted, all keys except the mute key  and the end-call key  will not work.
- ◆ A connected headset will also be muted.

## Making internal calls

Internal calls to other handsets registered on the same base are free.

### Calling a specific handset



Initiate internal call.



Enter the number of the handset.

or:



Initiate internal call.



Select handset.



Press the talk key.

### Calling all handsets ("group call")



Press and **hold**.

or:



Initiate internal call.



Press the star key.

or

### Call All

Select



Press the talk key.

All handsets are called.

### Ending a call



Press the end call key.



# Using the Directory and lists

The options are:

- ◆ Directory
- ◆ Redial List
- ◆ Incoming SMS Message List (dependent on base)
- ◆ Call Lists
- ◆ Missed Alarms List

You can create a personalised Directory for your own handset. You can also send lists/entries to other handsets (→ page 24).

## Using the Directory

You can save up to 500 entries in the Directory.


### Please note

To quickly access a number from the Directory, (Quick Dial), you can assign the number to a key (→ page 34).

## Directory

In the **Directory**, you can save:

- ◆ Up to three numbers and associated first names and surnames
- ◆ E-mail addresses
- ◆ Anniversaries with reminder
- ◆ VIP ringtone with VIP icon
- ◆ Caller Pictures

Open the Directory in idle status using the  key.

### Length of the entries

3 numbers: each max. 32 digits

First name and surname:  
each max. 16 characters

E-mail address: max. 64 characters

## Saving a number in the Directory

 → <New Entry>

► You can enter data in the following fields:

**First Name: / Surname:**

Enter first names and/or surnames.




If you do not enter a name in either of the fields, the phone number is saved and displayed in place of a surname.

(For instructions on entering text and special characters, → page 44.)

**Phone (Home): / Phone (Office): /**

**Phone (Mobile):**

Enter a number in at least one of the fields.

When scrolling through the Directory, the entries are highlighted by a prefixed symbol:  /  / .

**E-mail:**

Enter the e-mail address.

**Anniversary:**

Select **On** or **Off**.

With setting **On**:

Enter **Annivers. (Date)** and **Anniversary (time)** and select reminder type:

**Anniversary (tone)** (→ page 25).


**Caller Picture:**

If required, select a picture to be displayed when this person calls (see Using the Resource Directory, page 38).

Prerequisite: Calling Line Identification (CLIP).

**Caller Melody (VIP):**

Mark a Directory entry as a **VIP** (Very Important Person) by assigning a specific ringtone to it. VIP calls are recognised by the ring-tone.

When scrolling through the Directory, VIP entries are highlighted by the  icon.

Prerequisite: Calling Line Identification (CLIP).

**Save**

Press the display key.

## Order of Directory entries

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the Directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters



## Using the Directory and lists

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the Directory.



### Selecting a Directory entry




 Open the Directory.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first letters of the name (max. 8), if necessary scroll to the entry with the  key. The Directory searches for the surname. If a surname has not been entered, the Directory searches for the first name.



### Selecting from the Directory

 →  (Select entry)

 Press the talk key.  
(If several numbers are entered, select the required number by pressing  and press the talk key  again).  
The number is dialled.


## Managing Directory entries

### Viewing entries


 →  (Select entry)

**View** Press the display key. The entry is displayed.

**Options** Press the display key.

The following functions can be selected with :

#### Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number is displayed.

#### Delete Entry

Delete selected entry.



#### Copy Entry

**to Internal:** Send a single entry to a handset (→ page 24).

**vCard via SMS:** Send a single entry in vCard format via SMS.

**vCard via Bluetooth:** Send a single entry in vCard format via Bluetooth.



### Editing entries

 →  (Select entry)


**View** **Edit** Press the display keys one after the other.

- ▶ Carry out changes and save.



### Using other functions

 →  (Select entry)

→ **Options** (Open menu)

The following functions can be selected with :

#### Display Number

Edit or add to a saved number and then dial with  or save as a new entry; to do so, press  after the number is displayed.

#### Edit Entry

Edit selected entry.

#### Delete Entry

Delete selected entry.

#### Copy Entry

**to Internal:** Send a single entry to a handset (→ page 24).

**vCard via SMS:** Send a single entry in vCard format via SMS.

**vCard via Bluetooth:** Send a single entry in vCard format via Bluetooth.

#### Delete All

Delete **all** entries in the Directory.

#### Copy All

**to Internal:** Send the complete list to a handset (→ page 24).

**vCard via Bluetooth:** Send the complete list in vCard format via Bluetooth.

#### Available Memory

Display the number of entries that are still available in the Directory (→ page 23).

## Using Quick Dial keys



- ▶ Press and **hold** the required Quick Dial key (→ page 34).


## Transferring the Directory to another handset

### Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.

- ◆ The other handset and the base can send and receive Directory entries.

 →  (Select entry) → **Options**  
(Open menu) → **Copy Entry / Copy All**  
→ **to Internal**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding to the **Entry copied - Copy next entry?** prompt with **Yes**.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

#### Please note:


- ◆ Entries with identical numbers are not over-written on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.
- ◆ Pictures and sounds assigned to entries are not transferred.

### Transferring the directory as a vCard with Bluetooth

In Bluetooth mode (→ page 33), you can transfer directory entries in vCard format, e.g., to exchange entries with your mobile phone.

 →  (select entry) → **Options** (open menu)  
→ **Copy Entry / Copy All**  
→ **vCard via Bluetooth**


The list of "Known Devices" (→ page 33) is displayed.

 Select device and press **OK**.

### Receiving a vCard with Bluetooth

If a device from the "Known Devices" list (→ page 33) sends a vCard to your handset, this occurs automatically. You are informed about it via the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:

 Enter the PIN for the **sending** Bluetooth device and press **OK**.

The transferred vCard is available as a directory entry.

### Copying the displayed number to the Directory

You can copy numbers displayed in a list, e.g., the Call List or the Redial List, or in an SMS, to the Directory.



A number is displayed:


**Options** → **Copy to Directory**

- ▶ Complete the entry (→ page 23).

### Copying a number or e-mail address from the Directory



In some operating situations, you can open the Directory to copy a number or e-mail address, for example. Your handset need not be in idle status.

- ▶ Depending on the operating situation, open the Directory with  or .


 Select entry (→ page 24).

### Storing an anniversary in the Directory

For each number in the Directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: **Anniversary: Off**).

 →  (Select entry)

**View Edit** Press the display keys one after the other.

 Scroll to the **Anniversary** line.

 Select **On**.

- ▶ You can enter data in the following fields:

#### Annivers. (Date)

Enter day/month/year in 8-digit format.

#### Anniversary (time)

Enter the hour/minute for the reminder call in 4-digit format.

#### Anniversary (tone)

Select the reminder type.



**Save** Press the display key.

#### Please note


A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

## Using the Directory and lists

### Deactivating anniversaries

 →  (Select entry)

**View** **Edit** Press the display keys one after the other.


 Scroll to the **Anniversary** line.

 Select **Off**.

**Save** Press the display key.

### Scheduling a reminder call on an anniversary

In **idle status**, a reminder call is indicated on the handset display and by the selected ring-tone and volume that has been set for internal calls (→ page 37).

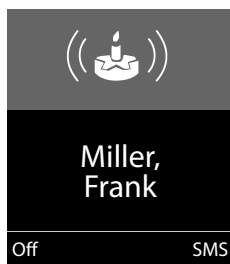

You can:

**SMS** Write an SMS.

**Off** Press the display key to acknowledge and end the reminder call.

**During the reminder call**, you can permanently change the volume by pressing the side keys **+** (louder) or **-** (quieter).

**When you are on the phone**, a reminder call is indicated on the handset with a **single** advisory tone.


Anniversaries that are indicated during a call and are not acknowledged are entered in the **Missed Alarms** List (→ page 28).


## Using the Redial List

The Redial List contains the twenty numbers last dialled with the handset (max. 32 digits). If one of the numbers is in the Directory, the corresponding name is displayed.

## Using manual redial

 Press the key **briefly**.

 Select entry.

 Press the talk key again.  
The number is dialled.


When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

## Managing entries in the Redial List

 Press the key **briefly**.

 Select entry.

**Options** Open menu.


The following functions can be selected with :

### Copy to Directory

Copy an entry to the Directory (page 23).

### Automatic Redial

The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes and "open listening" is activated.

- Party answers:  
**Press the talk key** . The function is terminated.
- Party does not answer:  
The call is terminated after approx. 30 seconds. The function is terminated after pressing any key or after ten unsuccessful attempts.

**Display Number** (as in the Directory, page 24)

**Delete Entry** (as in the Directory, page 24)

**Delete All** (as in the Directory, page 24)

## Using the Incoming SMS Message List (dependent on base)

All received SMS messages are saved in the Incoming Message List.

## Using the Call Lists

**Prerequisite:** Calling Line Identification (CLIP).

Your telephone stores various types of calls (dependent on base):

- ◆ Accepted calls
- ◆ Outgoing calls
- ◆ Missed calls

When in idle status, open the Call Lists by selecting the **Calls** display key or via the menu:







### Viewing a list entry

New messages are displayed at the top.

Example of list entries:

All Calls	
  Frank	
14.10.11, 15:40	
 089563810	
14.10.11, 15:32	
 ...0123727859362922	
14.10.11, 15:07	
View	Options

- ◆ List type (in header)
- ◆ Status of entry
  - Bold:** new entry
- ◆ Number or name of caller
- ◆ Date and time of call (if set, page 11)
- ◆ Type of entry:
  - Accepted Calls (  )
  - Missed Calls (  )
  - Outgoing Calls (  )

Press the talk key  to call the selected caller back.

Select the **View** display key to access additional information, including for example the number linked to the name

Select the **Options** display key to select the following options:

#### Copy to Directory

Copy the number to the Directory.

#### Delete Entry

Delete selected entry.


#### Delete All

Delete all entries.

When you quit the Call Lists, all entries are set to the status "old", i.e., the next time you call up the list, they will no longer be shown in bold.

## Message key function





### Opening lists

Use the message key  to open the following list selection:





- ◆ Answering Machine List (dependent on base) or Network Mailbox, if your network provider supports this function and fast access is set for the Network Mailbox.
- ◆ Incoming SMS Message List (dependent on base)
- ◆ Missed Calls List
- ◆ Missed Alarms List (→ page 28)

An advisory tone sounds as soon as a **new message** arrives in a list.

In **idle status**, the display shows an icon for the new message:


Icon	New message...
	... on the Network Mailbox
	... in the <b>Missed Calls</b> List
	... in the SMS List (dependent on base)
	... in the <b>Missed Alarms</b> List

The number of **new** entries is displayed under the corresponding icon.

			
02	10	09	08


#### Please note

If calls are saved in the Network Mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).

After pressing the message key , you can see all lists containing messages and the Network Mailbox List.


## Using the Network Mailbox

Lists containing new messages are at the top of the list and are marked in a bold font.

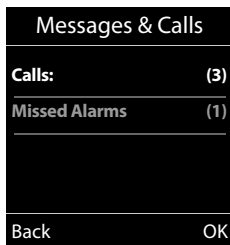


Select a list with . To open, press **OK**.


### Disable/enable flashing of the message key

You can select whether the message key  flashes (default setting) or does not flash when new messages arrive. Please do the following:


- ▶ Press the key sequence:




The following is displayed:




- ▶ Press one of the following keys to select the message type:

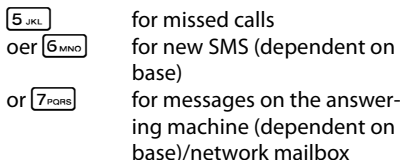


Your selection is displayed (e.g. 5 for missed calls); the current setting flashes:

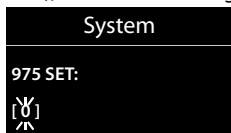

- ▶ Press key **[0 +]** or **[1 ∞]**, to set the behavior for new messages:




Your selection is displayed (e.g. 1):

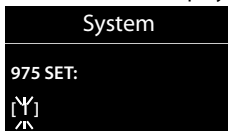

- ▶ Press the display key **OK**.

## Using the Missed Alarms List

Missed (unacknowledged) appointments from the Calendar (→ page 29) and anniversaries (→ page 25) are saved in the **Missed Alarms** List under the following circumstances:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic Redial was activated at the time of an appointment/anniversary (→ page 26).
- ◆ Open the list by pressing the **message key**  (→ page 27).

Each entry is displayed with:

- ◆ Number or name
- ◆ Date and time

The most recent entry is at the head of the list.

Press the display key **Delete**, to delete the selected entry.

If ten entries are already stored in the list, the next appointment reminder will delete the oldest entry.

## Using the Network Mailbox

The Network Mailbox is your network provider's Answering Machine within the network. You cannot use the Network Mailbox unless you have **requested** it from your network provider.

## ECO DECT

You are helping to protect the environment with your Gigaset handset.

### Reducing energy consumption

By using an energy-saving power supply, your telephone consumes less power.

### Reducing radiation (dependent on base)

**The radiation can only be reduced if your base supports this function.**

The transmission power of your telephone is **automatically** reduced depending on the distance to the base.



You can reduce the radiation of the handset and base even further by using **Eco Mode** or **Eco Mode+**. For further information, please refer to your base user guide.

## Setting an appointment (Calendar)

You can use your handset to remind yourself of up to **30 appointments**. Anniversaries (→ page 25) entered in the Directory are automatically recorded in the Calendar.

### Saving an appointment

**Prerequisite:** The date and time have already been set (→ page 11).

 →  → **Calendar**

Dec 2011						
Mo	Tu	We	Th	Fr	Sa	Su
			01	02	03	04
05	06	07	08	09	10	11
12	13	14	15	16	17	18
19	20	21	22	23	24	25
26	27	28	29	30	31	
Back		Options				

- ◆ The current day is selected (highlighted in white).

- ◆ Days on which appointments have already been saved are highlighted in white.



Select the required day in the graphical calendar.

The selected day is highlighted in white. The current day is no longer highlighted.



Press the centre of the control key.

- ◆ If appointments have already been entered, this will open the list of saved appointments on that day.

Select **<New Entry>** → **OK** to open the data input window.

- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.

- ▶ You can enter data in the following fields:

#### Activation:

Select **On** or **Off**.

#### Date:

Enter day/month/year in 8-digit format.

#### Time:

Enter hours/minutes in 4-digit format.

#### Text:

Enter text (max. of 16 characters). The text appears as the appointment name in the list and is displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

#### Signal:

Select the reminder type.



Press the display key.

#### Please note


If you have already saved thirty appointments, you will need to delete an existing appointment before adding a new one.

### Signalling appointments and anniversaries

An appointment reminder is signalled in idle status for 60 seconds with the selected ringtone at the volume that has been set for internal calls (→ page 37). **During the reminder call**, you can permanently change the volume by pressing the side keys **+** (louder) or **-** (quieter).

## Setting an appointment (Calendar)

The name is displayed for anniversaries, while the entered text is displayed for appointments along with the date and time.

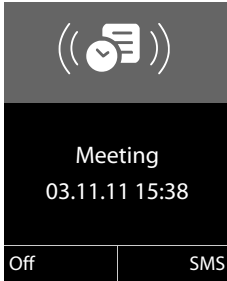

**You can either deactivate or answer an appointment reminder:**

**Off** Press the display key to deactivate the appointment reminder.



or:

**SMS** Press the display key to respond to the appointment reminder with an SMS.




### Please note

During a call, the appointment reminder is only signalled by a short tone.

## Managing appointments

 →  → **Calendar**

### Editing individual appointments

 /  Select a day in the graphical Calendar and press the control key . (Days on which appointments have already been saved are highlighted in white in the Calendar).

 Select appointment for the day.

You have the following options:

**View** Press the display key and edit or confirm the entry.

or

**Options** Open the menu for editing, deleting and activating/deactivating.

### Deleting all appointments for one day


**Options** → **Delete all Appts.** → **OK**


Confirm the security prompt with **Yes**.  
All appointments are deleted.

## Displaying missed appointments, anniversaries

Missed appointments/anniversaries (→ page 25) are displayed in the **Missed Alarms** List if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic Redial was activated at the time of an appointment/anniversary (→ page 26).

The icon  and the number of **new** entries are shown in the display. The most recent entry is at the head of the list.

Open the list by selecting the **message key**  (→ page 27) or via the **menu**:

 →  → **Missed Alarms**

Select appointment/anniversary. Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

**Delete** Delete appointment.

**SMS** Write an SMS.



If ten entries are already stored in the list, the next appointment reminder will delete the oldest entry.



## Setting the Alarm Clock

**Prerequisite:** The date and time have already been set (→ page 11).

### Activating/deactivating the Alarm Clock and setting the wake-up time

 →  → **Alarm Clock**

► You can enter data in the following fields:

**Activation:**

Select **On** or **Off**.

**Time:**

Enter the wake-up time in 4-digit format.

**How often:**

Select **Daily** or **Monday-Friday**.

**Volume:**

Set the volume (1–6).



**Melody:**

Select melody.

**Save** Press the display key.

In idle status, the  icon and wake-up time are displayed.

A wake-up call is signalled on the display and with the selected ringtone (→ page 2). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

**While the wake-up call sounds,** you can permanently change the volume by pressing the side keys  (louder) or  (quieter).

During a call, the wake-up call is only signalled by a short tone.

### Deactivating the wake-up call/ repeating after a pause (Snooze mode)

**Prerequisite:** A wake-up call is sounding.

**OFF** Press the display key. The wake-up call is deactivated.

or

**Snooze** Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

## Using a handset as a Room Monitor (Babyphone)

If the Room Monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the display keys.

The Room Monitor call to an external number is terminated after approximately 90 seconds. The Room Monitor call to an internal number (handset) is terminated after approximately 3 minutes (depending on the base). When the Room Monitor is activated, all keys are locked except the end call key. The handset's speaker can be switched on or off (**Two Way Talk = On** or **Off**). If **Two Way Talk** is switched on, you can answer the room monitor call.

When the Room Monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and Advisory Tones are also turned off.

If you accept an incoming call, the Room Monitor is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the Room Monitor remains activated.

## Using a handset as a Room Monitor (Babyphone)

### Warning!

- ◆ Always check the operation of the Room Monitor before use. For example, test its sensitivity. Check the connection if you are diverting the Room Monitor to an external number.
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charger. This ensures that the battery does not run down.
- ◆ Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- ◆ The connection to which the Room Monitor is diverted must not be blocked by an activated Answering Machine.

## Activating the Room Monitor and entering the destination number

### → ★ → Room Monitor


- ▶ You can enter data in the following fields:

#### Activation:

Select **On** to activate.

#### Alarm to:

Select **Internal** or **External**.

**External number:** Select the number from the Directory (press display key ) or enter it manually.

**Internal number:** Select display key **Change** → . Select handset or **Call All** to call all registered handsets → **OK**.

In idle status, the destination number or the internal destination number is displayed.

#### Two Way Talk:


Switch the handset's speaker on or off (select **On** or **Off**).

#### Sensitivity:

Select the sensitivity of the sound level (select **Low** or **High**).

- ▶ Press **Save** to save the settings.

When the Room Monitor function is activated, the idle display appears as shown below:

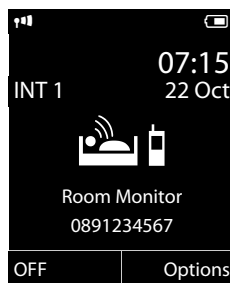

## Changing the set destination number

### → ★ → Room Monitor

- ▶ Enter and save number as described in "Activating the Room Monitor and entering the destination number" (→ page 32).

## Cancelling/deactivating the Room Monitor

Press the end call key  to cancel the call when the Room Monitor is **activated**.

In **idle status**, press the display key **OFF** to deactivate Room Monitor mode.

## Deactivating the Room Monitor remotely

**Prerequisites:** The phone must support tone dialling and the Room Monitor should be set for an external destination number.

- ▶ Accept the call from the Room Monitor and press keys **9** **#**.

The Room Monitor function will deactivate after the call ends. There are no further Room Monitor calls. The other Room Monitor settings on the handset (e.g., no ringtone) will remain activated until you press the display key **OFF** on the handset.

To reactivate the Room Monitor with the same phone number:

- ▶ Turn on the activation again and save with **Save** (→ page 32).

## Using Bluetooth devices

Your Gigaset handset can communicate wirelessly via Bluetooth™ with other devices using this technology.

Before you can use your Bluetooth device, activate Bluetooth, ensure the devices are visible and then register the handset.

You can register one Bluetooth headset to the handset. You can also register up to five data devices (PCs, PDAs and mobile phones) to send and receive directory entries as vCards or exchange data with the computer (→ page 45).

To use the phone numbers, dialling codes (country and area code) must be stored in the directory (→ page 39).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.


### Please note

- ◆ You can operate headsets on your handset that have the **headset** or **handsfree profile**. If both profiles are available, the handsfree profile is used to communicate.
- ◆ It can take up to five seconds to establish a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset or transferred to the headset, and when a number is dialled from the handset.

## Activating/deactivating Bluetooth mode

### → → Activation

Press **Change** to activate or deactivate Bluetooth mode (☑ = activated).

In idle status, the  icon on the handset shows that Bluetooth mode is activated (→ page 2).

## Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

### Please note

- ◆ If you register a headset, any headset that is already registered will be overwritten.
- ◆ If you would like to use a headset with your handset that is already registered to another device (e.g., to a mobile phone), please **deactivate** this connection before you start the registration process.

### → → Search for Headset / Search Data Device

The search can take up to 30 seconds.

Once the device has been found, its name is shown on the display.

**Options** Press the display key.

### Trust Device

Select and press **OK**.



Enter the PIN for the Bluetooth device **you want to register** and press **OK**.

The device is saved in the list of known devices.

## Cancelling/repeating current search

To cancel search:

**Cancel** Press the display key.

Repeat search if necessary:

**Options** Press the display key.

### Repeat Search



Select and press **OK**.


## Editing the list of known (trusted) devices

### Open list

#### → → Known Devices

A corresponding icon appears next to each device name in the list displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device

If a device is connected, the corresponding icon is shown in the header of the display instead of .

## Setting up the handset

### Viewing entries

Open list →  (select entry)

**View**

Press the display key.  
Device name and address are displayed.  
Go back with **OK**.

### Deregistering Bluetooth devices

Open list →  (select entry)

**Options**

Press the display key.

### Delete Entry

Select and press **OK**.

#### Please note

If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device".

### Changing the name of a Bluetooth device

Open list →  (select entry)

**Options**

Press the display key.

### Edit Name

Select and press **OK**.



Change the name.

**Save**

Press the display key

### Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

#### ◆ Reject



Briefly press the end call key.

#### ◆ Accept



Enter the PIN for the Bluetooth device **you want to accept** and press **OK**.



If you have accepted the device, you can use it temporarily (i.e., as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Once the device's PIN has been confirmed

- Save to the list of known devices: press display key **Yes**.
- Use temporarily: press display key **No**.

### Changing the Bluetooth name of the handset

You can change the handset name used to identify it on the display of another Bluetooth device.

 →  → Own Device

**Change**

Press the display key



Change the name.

**Save**

Press the display key

## Setting up the handset

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

### Quickly accessing numbers and functions

You can assign a **number from the Directory** to each of the **digit keys** **0 +** and **2 ABC** to **9WXYZ**.

The left and right **display keys** have a default **function**. You can change the assignment (→ page 35).

The number is then dialled or the function started by simply pressing a key.

### Assigning digit keys

**Prerequisite:** You have not yet assigned a number to the digit key.

- ▶ Press and **hold** the digit key  
or  
Press the digit key **briefly** and press the display key **QuickDial**.

The Directory opens.

- ▶ Select an entry and press **OK**.

The entry is saved to the corresponding digit key.

#### Please note

If you delete or edit the entry in the Directory at a later date, this will not affect the assignment to the number key.

## Selecting numbers/changing an assignment

**Prerequisite:** The digit key already has a number assigned to it.

When the handset is in idle status

- ▶ Press and **hold** the digit key:  
The number is dialled immediately.

or

- ▶ **Briefly** press the digit key.  
Press the display key with the number/  
name (abbreviated if necessary) to select  
the number  
or  
press the display key **Change** to change the  
assignment or to delete the assignment.

## Changing display key assignments

- ▶ Press and **hold** the left or right side of the display key.

The list of possible key assignments is opened.  
The following can be selected:

### Room Monitor

Assign menu for setting and activating the  
Room Monitor to a key (→ page 31).

### Alarm Clock

Assign menu for setting and activating the  
Alarm Clock to a key (→ page 31).

### Calendar

Display graphical Calendar (→ page 29).

### Bluetooth

Assign the Bluetooth menu to a key  
(→ page 33).

### Redial

Display the Redial List.

### More Functions...

More features are available:

#### Call Lists

Display Call Lists (→ page 27).

#### INT

Internal calls (→ page 22).

#### SMS (dependent on base)

Assign menu for SMS functions to a key.



#### Withhold Number


Withhold phone number identification  
for next call.

- ▶ Select an entry and press **OK**.

## Changing the display language

You can view the display texts in different languages.


 →  → **Language**

The current language is indicated by .

 Choose language and  
press **Select**.

If you accidentally choose a language you do  
not understand:

 →  **9 WXYZ**  **5 JKL**


 Select the correct language and  
press the **right display key**.

## Setting the display

### Setting the screensaver/slide show

When in idle state, a picture or a slide show (all  
the pictures are displayed one after the other)  
from the **Screensaver** folder of the **Resource  
Directory** (→ page 38) or the time can be dis-  
played as a screensaver. This will replace the  
idle state display.

The screensaver is not displayed in certain situ-  
ations, e.g., during a call or if the handset is de-  
registered.

If a screensaver is activated, the **Screensaver**  
menu option is marked with .

 →  → **Display + Keypad**  
→ **Screensaver**

The current setting is displayed.


- ▶ You can enter data in the following fields:


#### Activation:


Select **On** (screensaver is displayed) or **Off**  
(no screensaver).


#### Selection:

Select screensaver or

 **View** Press the display key. The active  
screensaver is displayed.

 Select screensaver and press **OK**.

 **Save** Press the display key.

**Briefly** press the end call key  to return to  
the idle display.

### Please note

If the **analogue clock** has been set as the screensaver, the **second hand** is shown only when the handset is **in the base**.

## Setting Large Font



You can increase the font size of print and symbols in call lists and in the directory to improve readability. Only one entry is shown at a time on the display instead of several entries and names are abbreviated if necessary.

 →  → **Display + Keypad**  
→ **Large Font**

**Change** Press display key (☒ = on).

## Setting the Colour Scheme

You can set the display to be shown in various colour combinations.

 →  → **Display + Keypad**  
→ **Colour Schemes**

Select **Colour Scheme** (1 to 5) and press **OK**.

## Setting the display Backlight

Depending on whether or not the handset is in the charger, you can activate or deactivate the Backlight. If it is activated, the display is permanently dimmed. If the backlight is deactivated it is switched on by pressing any key. **Digit keys** appear on the display for pre-dialling; **all other keys** do not have any further functions.

 →  → **Display + Keypad**  
→ **Display Backlight**

The current setting is displayed.

▶ You can enter data in the following fields:

### In Charger

Select **On** or **Off**.

### Out of Charger

Select **On** or **Off**.

### Please note

With the **On** setting, the standby time of the handset can be significantly reduced.

**Save** Press the display key.

## Setting keypad illumination

The brightness of the keypad illumination can be set to one of five levels.

 →  → **Display + Keypad**  
→ **Keypad Illumination**

The current setting is displayed.


▶ You can enter data in the following fields:

### Brightness:

Select 1 (darkest) to 5 (brightest).

**Save** Press the display key.

## Activating/deactivating Auto Answer

If this function is activated, you can simply lift the handset out of the charger without having to press the talk key  when you receive a call.





 →  → **Telephony** → **Auto Answer**

**Change** Press display key (☒ = on).



## Changing the speaker/earpiece volume

You can set the loudspeaker volume for hands-free mode and the earpiece volume to five different levels.


During a conversation via the earpiece or in handsfree mode:

 /  Press the side key to call up the **Handset Volume** menu. Change the volume by pressing  (louder) or  (quieter).

or

 Press the control key to call up the **Handset Volume** menu. Set the earpiece or speaker volume by pressing .

The setting will automatically be saved after approximately 3 seconds or press the display key **Save**.

If  is assigned a different function:

**Options** Open menu.

**Volume** Select and press **OK**.

Configure setting (see above).

**Please note**

- ◆ The settings for the earpiece also apply to a connected headset.
- ◆ You can also set the call volume using the menu (→ page 20).

## Setting a handsfree profile

You can set different handsfree profiles to optimally adapt your phone to your environment.

**Profile 1**

The optimum setting for most connections and set as default.

**Profile 2**

Optimum volume in handsfree mode. However, this means that the participants cannot speak at the same time as the person speaking is given preferential transmission (making two-way conversations difficult).

**Profile 3**


Optimises two-way conversations, both callers can hear each other, even if they talk at the same time.

**Profile 4**

Optimised for special connections. If the default setting (profile 1) does not provide optimum sound, please give this a try.

In idle status:

 →  → **Audio Settings**  
→ **Handsfree Profiles**

 Select handsfree profile (1 to 4).

**Select** Press the display key to save the setting.

During a conversation:

**Options** Open menu.



**Handsfree Profiles**

Select and press **OK**.

 Select handsfree profile (1 to 4).

**Select** Press the display key to save the setting.

## Changing ringtones

- ◆ **Volume:** You can choose between five volumes (1–5; e.g., volume 3 = ) and the "crescendo" ringtone (6; volume increases with each ring = .



- ◆ **Ringtones:** You can select a ringtone from a list of pre-loaded melodies.  
You can select various ringtones, melodies or any sound from the Resource Directory (→ page 38).


You can set different ringtones for the following functions:


- ◆ Int. Calls
- ◆ Extern. Calls


## Setting volume/melodies

In idle status:

 →  → **Audio Settings**  
→ **Ringtones(Handset)** → **Volume / Melodies**

 Setting volume/melodies for internal calls and anniversaries.

 Scroll to the next line.

 Setting volumes/melodies for external calls.

**Save** Press the display key to save the setting.

**While the phone is ringing,** you can permanently change the volume by pressing the side keys **+** (louder) or **-** (quieter).

### **Additionally for external calls:**

You can specify a time period when you do not want the telephone to ring, e.g., during the night.

 →  → **Audio Settings**  
→ **Ringtones(Handset)** → **Time Control**

**For external calls:**

Select **On** or **Off**.

If the Time Control is activated:

**Suspend ring. from:**

Enter the start of the period in 4-digit format.

**Suspend ring. until:**

Enter the end of the period in 4-digit format.



**Please note**


During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody in the Directory (VIP).

## Activating/deactivating the ringtone for anonymous calls

You can set your handset not to ring for calls where Calling Line Identification has been restricted (not answering machine). The call will only be signalled on the display.

In idle status:


 →  → **Audio Settings**  
→ **Ringtones(Handset)** → **Anon. Calls Silent**


Press **Change** to activate or deactivate the function ( = on).

## Activating/deactivating the ringtone


You can deactivate the ringtone on your handset before you answer a call or when the handset is in idle status; the ringtone can be deactivated permanently or just for the current call. The ringtone cannot be re-activated while an external call is in progress.

### Deactivating the ringtone permanently

 Press and **hold** the star key.

The  icon appears in the display.

### Reactivating the ringtone


 Press and **hold** the star key.


### Deactivating the ringtone for the current call

**Silence** Press the display key.

## Activating/deactivating the alert tone

Instead of a ringtone, you can activate an alert tone. When you receive a call, you will hear a **short tone** ("Beep") instead of the ringtone.

 Press and **hold** the star key and **within 3 seconds**:

**Beep** Press the display key. A call will now be signalled by **one** short alert tone.  
 appears in the display.

## Using the Resource Directory

The Resource Directory on the handset manages sounds, which you can use as ringtones, and pictures (Caller Pictures and Screensavers). Prerequisite: Calling Line Identification (CLIP).

The Resource Directory can manage the following media types:



Type	Format
<b>Sound</b>	
Ringtones	Internal
Monophonic	Internal
Polyphonic	Internal
Imported sounds	WMA, MP3, WAV
<b>Picture</b>	
– Caller Picture	BMP, JPG, GIF 128 x 86 pixels
– Screensaver	128 x 160 pixels

Various mono and polyphonic sounds and pictures are preconfigured on your handset.


You can listen to the available sounds and view the pictures.

You can download pictures and sounds from a PC (→ page 45). If there is not enough memory available, you must first delete one or more pictures or sounds.

## Playing back sounds/viewing Caller Pictures


 →  → **Resource Directory**  
→ **Screensavers / Caller Pictures / Sounds** (select entry)

### Pictures:

**View** Press the display key. The selected picture is displayed. Switch between pictures using the  key.

If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.


### Sounds:

The selected sound is played back immediately. Switch between the sounds using the  key.

You can set the volume during playback.

**Options** Open menu.

**Volume** Select and press **OK**.

 Set volume.


**Save** Press the display key.



## Deleting/renaming a picture/sound

You have selected an entry.

**Options** Open menu.

If a picture/sound cannot be deleted () , these options are not available. You can select the following functions:

### Delete Entry


The selected entry is deleted.

### Rename

Change the name (max. 16 characters) and press **Save**. The entry is stored with the new name.

## Checking the memory

You can check how much memory is available for Screensavers and Caller Pictures.



 →  → Resource Directory → Capacity

## Activating/deactivating Advisory Tones

Your handset uses Advisory Tones to tell you about different activities and statuses. The following Advisory Tones can be activated/deactivated independently of each other:

- ◆ **Key click:** every key press is confirmed.
- ◆ **Acknowledge tones:**
  - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in the Call List
  - **Error tone** (descending tone sequence): when you make an incorrect entry
  - **Menu end tone:** when scrolling to the end of a menu
- ◆ **Battery tone:** the battery requires charging.

In idle status:

 →  → Audio Settings  
→ Advisory Tones

▶ You can enter data in the following fields:

### Key Tones:

Select **On** or **Off**.

### Confirmation:

Select **On** or **Off**.

### Battery:

Select **On** or **Off**.

**Save** Press the display key.

## Setting your own area code






To transfer phone numbers (e.g., in vCards), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already preset.




 →  → Telephony → Area Codes

Check that the (pre)set area code is correct.

▶ You can enter data in the following fields:

-  Select/change input field.
-  Navigate in the input field.
-  If necessary, delete number: press the display key.
-  Enter number.
-  Press the display key.

Example:

Area Codes	
International code:	00 - 44
Local area code:	0 - 
 	

## Restoring the handset default settings

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset:

- ◆ Registration to the base
- ◆ Date and time
- ◆ Entries in the Calendar
- ◆ Entries in the Directory, the Call Lists, the SMS Lists and the content of the Resource Directory

 →  → System → Handset Reset

**Yes** Press the display key.

## Service (Customer Care)

---

You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal.

Please register your phone right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. Your personal user account enables you to directly contact our customer service by email.

Our representatives are available on the telephone hotlines for more advanced questions or immediate consultation.

### United Kingdom

[www.gigaset.com/uk/service](http://www.gigaset.com/uk/service)

**Service Hotline: 0845 367 0812**

(local call cost charge)

### Ireland

[www.gigaset.com/ie/service](http://www.gigaset.com/ie/service)

**Service Hotline: 1850 777 277**

(6.6561 Ct./Call)

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

## Authorisation

---

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs)

**CE 0682**

## Guarantee Certificate

### United Kingdom

---

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.

- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

## Guarantee Certificate

### Ireland

---

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
- ◆ The device is opened (this is classed as third party intervention)
- ◆ Repairs or other work done by persons not authorised by Gigaset Communications.
- ◆ Components on the printed circuit board are manipulated
- ◆ The software is manipulated
- ◆ Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- ◆ Devices fitted with accessories not authorised by Gigaset Communications

- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

## Caring for your environment

---

### Environmental management system

---



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

**ISO 14001 (Environment):** certified since September

2007 by TüV SÜD Management Service GmbH.

**ISO 9001 (Quality):** certified since 17/02/1994 by TüV SÜD Management Service GmbH.

### Ecological energy consumption

---

The use of ECO DECT (→ page 29) saves energy and makes an active contribution towards protecting the environment.

### Disposal

---

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

## Appendix

### Caring for your telephone

- ▶ Wipe the device with a **damp cloth** or an **antistatic cloth**. Do not use solvent or a microfibre cloth.
- ▶ Impairments in the high-gloss finish can be carefully removed using display polishes for mobile phones.

**Never** use a dry cloth as this can cause static.

### Contact with liquid

If the device comes into contact with liquid:

1. **Unplug the power supply** and/or **remove the battery** from the handset **immediately**.
2. Allow the liquid to drain from the device.
3. Pat all parts dry. Place the device (handset with the battery compartment open and the keypad facing down) in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again..

## Specifications

### Batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550 - 1000 mAh

The device is supplied with two approved batteries.

### Handset operating times/charging times

This Gigaset can charge batteries up to a capacity of 1000 mAh. The use of special high-performance batteries or batteries with high capacities is not recommended for cordless phones.

The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times).

	Capacity (mAh) approx.			
	550	700	800	1000
Standby time (hours)*	140/ 50	165/ 58	185/ 67	230/ 83
Talktime (hours)	11	12	14	17
Operating time for 1.5 hrs of calls per day (hours)**	85	95	110	135
Charging time in charger (hours)	6,5	7,5	8,5	10,5

\* without/with display Backlight

\*\* without display Backlight  
(Setting the display Backlight → page 36)

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

[www.gigaset.com/service](http://www.gigaset.com/service)

## General specifications

### DECT

DECT standard	Is supported
GAP standard	Is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Pulse repetition rate	100 Hz
Pulse transmission length	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel 250 mW pulse power
Range	Up to 300 m outdoors, up to 50 m indoors
Environmental conditions in operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/ PD (pulse dialling)

### Bluetooth

Radio frequency range	2402–2480 MHz
Transmission power	4 mW pulse power

## Writing and editing text

The following rules apply when writing text:

- ◆ Each key between **[0 +]** and **[9 WXYZ]** is assigned several letters and characters.
- ◆ Control the cursor with **[←]**, **[→]**, **[↶]**, **[↷]**. Press and **hold** **[←]** or **[→]** to move the cursor **word by word**.
- ◆ Characters are inserted at the cursor position.
- ◆ Press the star key **[\* Δ]** to display the table of special characters. Select the required character and press the display key **[Insert]** to insert the character at the cursor position.
- ◆ Press and **hold** **[0 +]** to **[9 WXYZ]** to enter digits.

- ◆ Press display key **[<C]** to delete the **character** to the left of the cursor. Press and **hold** to delete the **word** to the left of the cursor.
- ◆ The first letter of the name of Directory entries is automatically capitalised, followed by lower case letters.

## Setting upper/lower case or digits

Repeatedly press the hash key **[# ↵]** to change the text input mode.

123	Writing digits
Abc	Upper case *
abc	Lower case

\* First letter in capitals, all others in lower case

The active mode is indicated at the bottom right of the screen.

## Writing an SMS/names

- ▶ Enter the individual letters/characters by pressing the corresponding key.

The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.

- ▶ **Briefly** press the key several times in succession to select the required letter/character.

## Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
<b>[1 00]</b>	1									
<b>[2 ABC]</b>	a	b	c	2	ä	á	à	â	ã	ç
<b>[3 DEF]</b>	d	e	f	3	ë	é	è	ê		
<b>[4 GHI]</b>	g	h	i	4	ï	í	ì	î		
<b>[5 JKL]</b>	j	k	l	5						
<b>[6 MNO]</b>	m	n	o	6	ö	ñ	ó	ò	ô	õ
<b>[7 PQRS]</b>	p	q	r	s	7	ß				
<b>[8 TUV]</b>	t	u	v	8	ü	ú	ù	û		
<b>[9 WXYZ]</b>	w	x	y	z	9	ÿ	ý	æ	ø	å
<b>[0 +]</b>	<sup>1)</sup>	.	,	?	!	<sup>2)</sup>	0			

- 1) Space
- 2) Line break

## Accessing additional functions via the PC interface

To enable your handset to communicate with the PC, the **"Gigaset QuickSync" program must be installed on your PC** (free to download at

[www.gigaset.com/gigaset810h](http://www.gigaset.com/gigaset810h)).

After installing **"Gigaset QuickSync"**, connect the handset to your computer using Bluetooth (→ page 33) or a USB data cable (→ page 13).

### Please note

Please connect your handset **directly** to the PC; do **not** connect via a USB hub.

If you want to use the Bluetooth connection, your computer must be equipped with a suitable dongle.

### Please

- ◆ If the USB data cable is plugged in, a Bluetooth connection cannot be established.
- ◆ If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is cancelled.

## Transferring data

Start the **"Gigaset QuickSync"** program. You can now:

- ◆ Synchronise your handset Directory with Outlook
- ◆ Download Caller Pictures (.bmp) from the computer to the handset
- ◆ Download pictures (.bmp) as a screensaver from the computer to the handset
- ◆ Download sounds (ringtones) from the computer to the handset

During the transfer of data between handset and PC, you will see **Data transfer in progress** on the display. During this time the keypad is disabled, and incoming calls are ignored.



## Completing a firmware update

- ▶ Connect your phone to your PC using a **USB data cable** (→ page 13).
- ▶ Start the **"Gigaset QuickSync"** program on your PC.
- ▶ Establish a connection to your handset.
- ▶ Select **[Settings]** → **[Device properties]** to open the **[Device]** tab.
- ▶ Click on **[Firmware update]**.

This launches the firmware update.

The update process can take up to 10 minutes (not including the download time). **Do not interrupt the process or remove the USB data cable.**

The data is initially loaded from the update server on the Internet. The amount of time this takes is dependent on the speed of your Internet connection.

The display on your phone is switched off and the message key  and the talk key  start flashing.

Once the update is complete, your phone will automatically restart.

### Procedure in case of an error

If the update procedure fails or your phone does not work properly following the update, repeat the update procedure as follows:

- ▶ Close the **"Gigaset QuickSync"** program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 7).
- ▶ Replace the battery.
- ▶ Complete the firmware update as described.



If the update procedure fails several times or you can no longer connect to the PC, proceed as follows (**emergency update**):

- ▶ Close the **"Gigaset QuickSync"** program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 7).

## Accessories

- ▶ Press and hold keys **4 GHI** and **6 MNO** with the index and middle finger.



- ▶ Replace the battery.
- ▶ Release keys **4 GHI** and **6 MNO**. The message key  and the talk key  will flash alternately.

- ▶ Complete the firmware update as described.

### Please note

Personal pictures and sounds that you have loaded to your handset should always be saved on your PC as they will be deleted during an **emergency update**.

## Accessories



### Ordering Gigaset products

You can order Gigaset products from your specialist retailer.

Gigaset  
Original  
Accessories

Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

## Mounting the charger on the wall

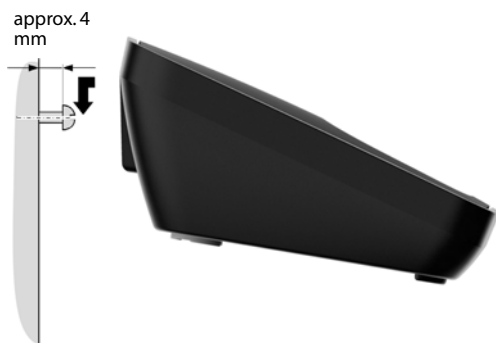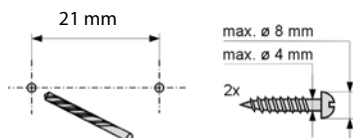



# Index

---

## A

Accessories.....	46
Acknowledge tones .....	39
Activating	
advisory tones.....	39
appointment .....	29
handset .....	16
keypad lock .....	16
room monitor .....	32
Advisory tones.....	39
Alarm Clock .....	31
Alert tone .....	38
Anniversary .....	25
deactivating.....	26
missed .....	28, 30
saving in the directory.....	25
Answering Machine List.....	27
Appointment.....	29
Appointment/anniversary	
display missed.....	30
Appointments	
activating/deactivating .....	30
deleting .....	30
managing.....	30
Area code	
setting own area code .....	39
Assigning a number key .....	34
Authorisation.....	40
Automatic	
redial.....	26
ring delay.....	21, 36

## B

Babyphone.....	31
Backlight	
keypad .....	36
Base	
setting up.....	6
Battery	
charging.....	1, 2, 8
display .....	1, 2
icon .....	1, 2
inserting.....	7
tone.....	39
Birthday, see Anniversary	
Bluetooth	
accepting a call .....	22

activate.....	33
changing device name .....	34
deregistering devices.....	34
list of known devices .....	33
registering devices .....	33
transferring directory (vCard).....	25

## C

Calendar.....	29
Call	
accepting.....	21
accepting (Bluetooth) .....	22
ending .....	21
external .....	21
internal.....	22
Call duration .....	21
Call Lists .....	27
Caller Picture .....	23, 38
Calling	
external .....	21
internal.....	22
Changing	
destination number	
(Room Monitor) .....	32
display language.....	9, 35
earpiece volume.....	36
ringtone .....	37
speaker volume.....	36
Changing device name (Bluetooth).....	34
Character set .....	44
Charge status display .....	1, 2
Colour scheme .....	36
Confirmation tone .....	39
Control key .....	1, 13
Correcting incorrect entries .....	15
Customer Care.....	40

## D

Deactivating	
advisory tones.....	39
appointment .....	29
handset .....	16
keypad lock .....	16
room monitor .....	32
Delete key .....	14
Deleting characters .....	15
Deregistering devices (Bluetooth) .....	34
Destination number (Room Monitor) .....	32
Dialling	
using Quick Dial .....	24, 34
using the directory.....	24

## Index

Directory.....	23
copying number from text .....	25
managing entries .....	24
opening .....	13, 14
order of entries .....	23
saving anniversary .....	25
saving entry.....	23
sending entry/list to handset .....	24
transferring a vCard (Bluetooth).....	25
using to enter numbers .....	25
Display .....	
backlight .....	36
changing display language.....	9, 35
colour scheme.....	36
directory memory.....	24
in idle status .....	12, 16
memory (Resource Directory).....	39
missed anniversaries .....	28
missed appointments/ anniversaries.....	30
screensaver .....	35
setting .....	35
slide show .....	35
Display keys .....	1, 14
assigning .....	34
Disposal .....	42
<b>E</b> .....	
Earpiece volume .....	36
ECO DECT .....	29
E-mail address .....	
copying from the directory .....	25
End call key .....	1, 21
Ending, call.....	21
Entry .....	
selecting from directory .....	24
Environment .....	42
Error tone .....	39
Expert mode .....	19
<b>F</b> .....	
Firmware update.....	45
Flashing of the message key .....	
disable/enable .....	28
<b>G</b> .....	
Group call.....	22
Guarantee Certificate .....	41

## H

Handset .....	
activating/deactivating .....	16
advisory tones.....	39
colour scheme.....	36
contact with liquid .....	43
de-registering .....	10
display Backlight.....	36
display backlight.....	36
display language.....	9, 35
earpiece volume.....	36
idle status.....	16
keypad backlight .....	36
large font .....	36
list .....	13, 14
muting .....	22
registering .....	10
restoring to factory settings .....	39
screensaver .....	35
set up for use.....	7
setting .....	34
speaker volume.....	36
using Room Monitor .....	31
Handset mode.....	22
Handset operating time .....	
in Room Monitor mode .....	32
Handsfree .....	
set profile .....	37
Handsfree key .....	1
Handsfree profile .....	37
Hash key.....	1, 16
Headset (Bluetooth) .....	33
Hearing aids.....	5
<b>I</b> .....	
Icon .....	
alarm clock.....	31
for new messages.....	27
keypad lock .....	16
ringtone .....	38
Idle status (display).....	12, 16
Idle status, returning to .....	16
Incorrect entries (correction) .....	15
Installing, base.....	6
Internal .....	
call.....	22
making calls.....	22

**K**

Key	
assigning to a function or number	34
Key 1 (fast access)	1
Keypad backlight	36
Keypad Lock	16
Keys	
control key	1, 13
delete key	14
display keys	1, 14
end call key	1, 21
fast access	1
handsfree key	1
hash key	1, 16
message key	1
mute key	1
on/off key	1
quick dial	24
recall key	1
side keys	1
star key	1
talk key	1, 21

**L**

Language, display	9, 35
Large font	36
List	
answering machine	27
call lists	27
handsets	13, 14
known devices (Bluetooth)	33
missed calls	27
network mailbox	27
SMS list	27
Lock	
activating/deactivating Keypad Lock	16

**M**

Making calls	
accepting a call	21
external	21
internal	22
Manual redial	26
Medical equipment	5
Memory	
directory	24
resource directory	39
Menu	
end tone	39
opening	13
overview	19
using	15
Menu display	
expert mode	19
standard mode	19
Message key	1
disable/enable flashing	28
opening lists	27
Microphone	1
Missed	
anniversary	30
appointment	30
calls	27
Mute key	1
Muting the handset	22

**N**

Network Mailbox	28
Night mode see Time Control	
Number	
as destination for Room Monitor	32
copying from directory	25
copying to the directory	25
entering with directory	25
saving in directory	23

**O**

On/Off key	1
One Touch Call	21
Order in directory	23

## Index

<b>P</b>	
Package contents .....	5
PC interface .....	45
Picture	
caller .....	23, 38
deleting .....	39
renaming .....	39
Power adapter .....	5
<b>Q</b>	
Quick Dial .....	23, 34
<b>R</b>	
Range .....	6
Recall key .....	1
Redial .....	26
Registering (handset) .....	10
Registering devices (Bluetooth) .....	33
Reminder call .....	26
Resource Directory .....	38
Ring Delay .....	36
Ringtone	
changing .....	37
setting volume .....	37
Ringtone deactivated for anonymous	
call .....	38
Room Monitor .....	31
<b>S</b>	
Screensaver .....	35
Search directory .....	24
Sending	
directory entry to handset .....	24
Sensitivity (Room Monitor) .....	32
Service .....	40
Setting the date .....	11, 20
Setting the time .....	11, 20
Setting up	
handset .....	7
Side keys .....	1
Signal tone, see Advisory Tones	
Slide show .....	35
SMS	
list .....	27
writing .....	44
Snooze mode .....	31
Sound, see Ringtone	
Speaker	
mode .....	22
Specifications .....	43
Standard mode .....	19
Star key .....	1
<b>T</b>	
Talk key .....	1, 21
Time Control (Night mode) .....	37
Two Way Talk (room monitor) .....	32
<b>U</b>	
Update .....	45
USB connection .....	13
<b>V</b>	
Volume	
earpiece .....	36
handset speaker volume .....	36
loudspeaker .....	36
ringtone .....	37
<b>W</b>	
Warning tone, see Advisory Tones	
Writing and editing text .....	44

**Issued by**

Gigaset Communications GmbH  
Frankenstr. 2a, D-46395 Bocholt

**© Gigaset Communications GmbH 2011**

All rights reserved. Subject to availability.

Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)